

64000

**HP64000
Logic Development
System**

**Model 64161A/162A/163A
Emulation Memory**



**HEWLETT
PACKARD**

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard system product is warranted against defects in materials and workmanship for a period of 90 days from date of installation. During the warranty period, HP will, at its options, either repair or replace products which prove to be defective.

Warranty service of this product will be performed at Buyer's facility at no charge within HP service travel areas. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses. In all other cases, products must be returned to a service facility designated by HP.

For products returned to HP for warranty service. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

SERVICE MANUAL
MODEL 64161A/162A/163A
EMULATION MEMORY

REPAIR NUMBERS

This manual applies directly to
Emulation Memory all repair number
prefixes.

© COPYRIGHT HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION 1982
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

All Rights Reserved

Manual Part Number 64161-90901
Microfiche Part Number 64161-90801

PRINTED: OCTOBER 1982

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification of the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

**Dangerous voltages, capable of causing death, are present in this instrument.
Use extreme caution when handling, testing, and adjusting.**

TABLE OF CONTENTS

Section		Page
I	GENERAL INFORMATION.....	1-1
	1-1. Introduction.....	1-1
	1-4. Instruments covered by this Manual.....	1-1
	1-9. Description.....	1-2
	1-14. Equipment Required but not Supplied.....	1-3
	1-16. Recommended Test Equipment.....	1-3
	1-18. Specifications.....	1-2
	1-20. Related Manuals.....	1-4
II	INSTALLATION.....	2-1
	2-1. Introduction.....	2-1
	2-3. Initial Inspection.....	2-1
	2-5. Installation.....	2-1
	2-7. Memory Space Configuration Guide.....	2-5
	2-8. Memory Space Configurations with 64151A Standard Memory Controller.....	2-5
	2-9. Memory Space Configurations with the 64155 Wide Memory Controller.....	2-6
	2-10. Operating Environment.....	2-8
	2-16. Storage and Shipment.....	2-9
III	OPERATION.....	3-1
IV	PERFORMANCE VERIFICATION AND TROUBLESHOOTING.....	4-1
	4-1. Introduction.....	4-1
	4-5. Performance Verification.....	4-1
	4-8. How to Run Performance Verification.....	4-3
	4-13. How to Interpret Performance Verification.....	4-7
V	ADJUSTMENTS.....	5-1
VI	REPLACEABLE PARTS.....	6-1
	6-1. Introduction.....	6-1
	6-3. Abbreviations.....	6-1
	6-5. Replaceable Parts List.....	6-1
	6-7. Ordering Information.....	6-2
	6-12. Direct Mail Order System.....	6-2

TABLE OF CONTENTS (continued)

Section		Page
VII	MANUAL CHANGES.....	7-1
VIII	THEORY AND SCHEMATICS.....	8-1
	8-1. Introduction.....	8-1
	8-3. Logic Conventions.....	8-1
	8-4. Logic Levels.....	8-1
	8-5. Power Supplies.....	8-1
	8-7. Theory.....	8-1
	8-8. Overview.....	8-1
	8-15. Block Theory.....	8-2
	8-24. Mnemonics.....	8-5

LIST OF ILLUSTRATIONS

Figure	Title	Page
1-1.	Model 64161A/162A/163A Emulation Memory.....	1-0
1-2.	Emulation Subsystem.....	1-2
2-1.	Emulation Memory Installation.....	2-3
2-2.	Emulation Memory Installation with Analysis.....	2-3
2-3.	Address Range Jumper Installation.....	2-4
4-1	Processor Control Test Display.....	4-6
4-2.	Memory Test Display.....	4-9
4-3.	Performance Verification Overview Display.....	4-13
4-4.	System-Board Access Test Display.....	4-13
4-5.	Memory Mapper Test Display.....	4-14
4-6.	Memory Control Test Display.....	4-14
4-7.	Emulation Access Test Display.....	4-15
6-1.	Replaceable Parts Locator.....	6-6
8-1.	Emulation Subsystem.....	8-0
8-2.	Emulation Memory Block Diagram.....	8-3
8-3.	Model 64161A/162A/163A Component Locator.....	8-12
8-4.	Service Sheet 1.....	8-13
8-5.	Service Sheet 2.....	8-14

LIST OF TABLES

Table	Title	Page
2-1	Memory Installation Configuration #1.....	2-5
2-2	Memory Installation Configuration #2.....	2-6
2-3.	Memory Installation Configuration #3.....	2-7
2-4.	Memory Installation Configuration #4.....	2-8
4-1.	Option Test Softkey Definitions.....	4-2
4-2.	Data Failure Status Decoding.....	4-8
4-3.	Memory Test. Sample Error Code vs. RAM and Data Buffer Failure.....	4-8
6-1.	Reference Designators and Abbreviations.....	6-3
6-2.	Replaceable Parts List.....	6-4
6-3.	List of Manufacturers' Codes.....	6-5

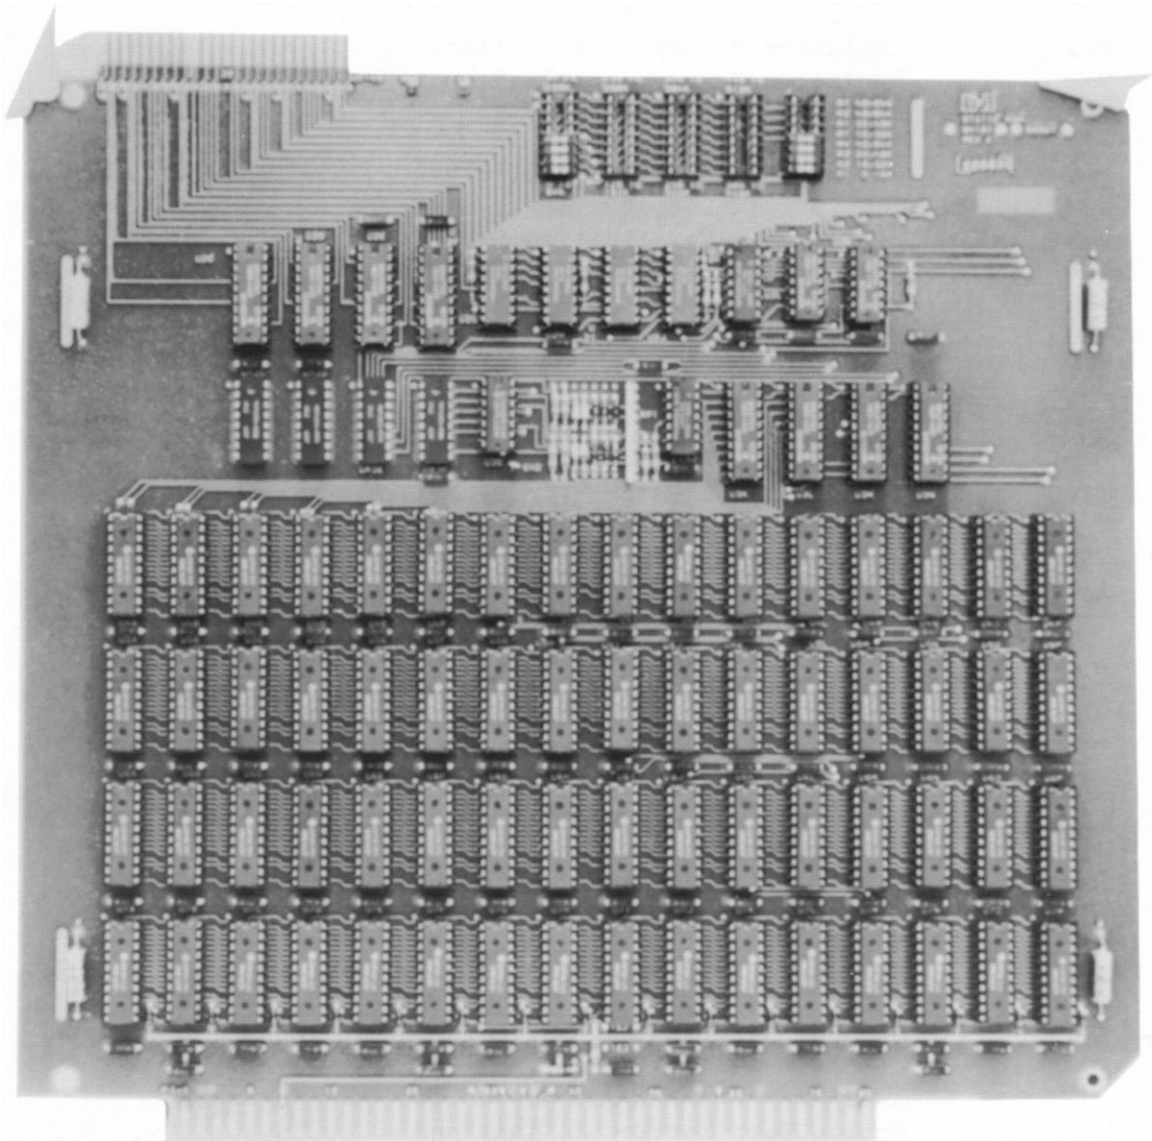


Figure 1-1. Model 64161A/162A/163A Emulation Memory

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This Service Manual contains information required to install, test and service the Hewlett-Packard Model 64161A/162A/163A Emulator Memory.

1-3. Shown on the title page is a microfiche part number. This number can be used to order a 4 X 6-inch microfilm transparency of the manual. Each microfiche contains up to 96 photoduplicates of the manual pages.

1-4. INSTRUMENTS COVERED BY THIS MANUAL.

1-5. Attached to the instrument or printed on the printed circuit board is the repair number. The repair number is in the form: 0000A0000. It is in two parts; the first four digits and the letter are the repair prefix, and the last five are the suffix. The prefix is the same for all identical instruments. The suffix, however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the repair number prefix(es) listed under REPAIR NUMBERS on the title page.

1-6. An instrument manufactured after the printing of this manual may have a repair number prefix that is not listed on the title page. This unlisted repair number prefix indicates that the instrument is different from those described in this manual. The manual for this newer instrument is accompanied by a Manual Changes Supplement. The supplement contains "change information" that explains how to adapt the manual for the newer instrument.

1-7. In addition to change information, the supplement contains information for correcting errors in the manual. To keep this manual as current as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes Supplement. The supplement for this manual is identified with the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-8. For information concerning a repair number prefix that is not listed on the title page or in the Manual Changes Supplement, call your nearest Hewlett-Packard office.

1-9. DESCRIPTION.

1-10. The 64000 microprocessor emulation systems, illustrated in Figure 1-2, allow software designers to develop and debug software modules for specific microprocessors. The emulation plug replaces the microprocessor physically in the target system permitting hardware in the emulation system to simulate the functions of the target microprocessor while driving target system hardware with the software being developed.

1-11. The emulation memory can be used to duplicate the target system memory. Address space can be allocated to target system RAM, target system ROM, emulation RAM, and emulation ROM, and illegal address space.

1-12. Models 64161A, 64162A, and 64163A Emulation Memory provide the possibility of up to 128K bytes of memory on one card. The three models differ from each other in the number of memory chips loaded on each board. The Model 64163A, 32k byte memory, has one 16-chip row of 16K x 1 static RAM chips loaded; Model 64162A, 64k byte memory, has two rows of chips loaded and the Model 64161A, 128k byte memory has four rows of chips.

1-13. The 64161A, 64162A and 64163A feature fast access time, low-power standby and operation modes, and the ability to access bytes as well as 16-bit words.

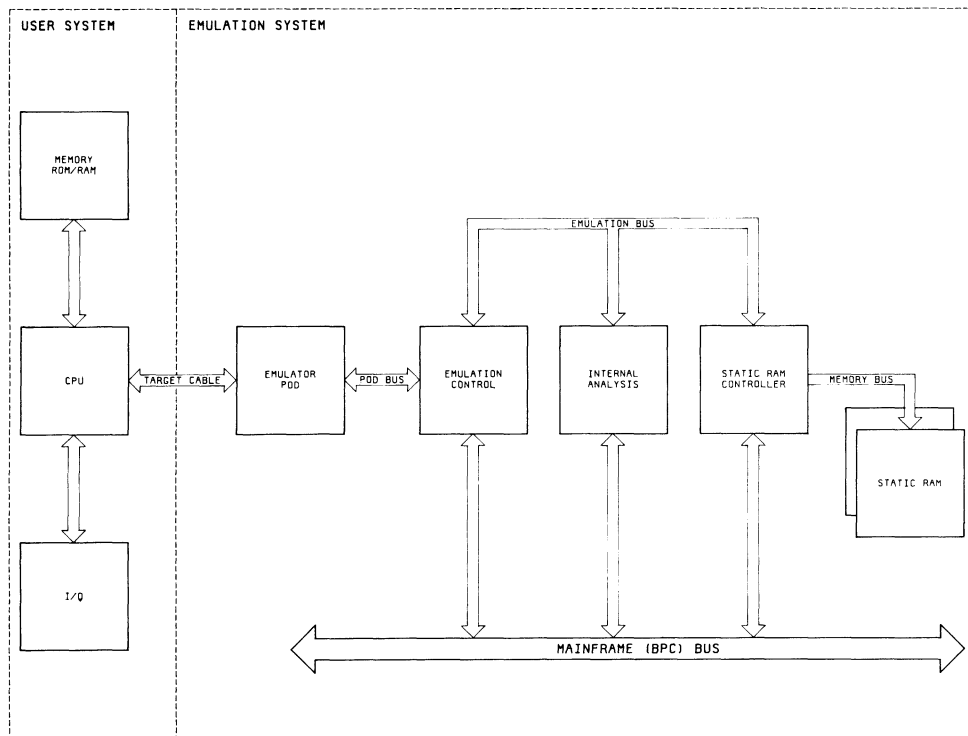


Figure 1-2. Emulation Subsystem

1-14. EQUIPMENT REQUIRED BUT NOT SUPPLIED.

1-15. A 64151 or 64155-66502 Memory Control Board is required to drive the 64161A, 64162A, or 64163A Emulator Memories.

1-16. TEST EQUIPMENT.

1-17. Table 1-1 lists the test equipment needed to repair and maintain Models 64161A/162A/163A.

Table 1-1

INSTRUMENT	RECOMMENDED MODEL	USE
Dual-trace Oscilloscope	HP1740A	Troubleshooting
Digital Voltmeter	HP3465A	Troubleshooting
64000 Extender Card	64100-66510	Troubleshooting
64000 Extender Cables (2)	8120-3350	Troubleshooting
Signature Analyzer	HP5004A, HP5005A	Troubleshooting
Memory Controller	HP64151A, HP64155	Troubleshooting

1-18. SPECIFICATIONS.

1-19. Specifications for the Model 64161A/162A/163A are listed in Table 1-2.

Table 1-2. Specifications.

	64161A	64162A	64163A
Power (Max Typ) mW			
0 rows selected	5283.7	5285.7	5285.7
1 row selected	8161.8	8163.7	8167.5
Current (Max Typ) mA			
0 rows selected	1056.7	1057.1	1057.9
1 row selected	1632.3	1632.7	1633.5

1-20. RELATED MANUALS.

1-21. Service Manuals.

64151A Memory Control Service Manual
64155 Memory Control Service Manual
64152A 32K Memory Service Manual

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information for installing and removing the Model 64161A/162A/163A. Included are initial inspection procedures and instructions for repacking the instrument for shipment.

2-3. INITIAL INSPECTION.

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. Procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the Performance Tests, notify the nearest Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The HP office will arrange for repair or replacement at HP's option without waiting for claim settlement.

2-5. INSTALLATION.

NOTE

If the following installation procedures are not followed, imaging problems may result.

2-6. The Models 64161A/162A/163A Emulation Memory Boards are installed using the following procedure. Figures 2-1 and 2-2 shows the recommended location of the emulation option boards in the HP64000 mainframes for two typical configurations: Emulation Memory only and Emulation Memory with Analysis. Note that with emulators which use the 64271A or 64274A Control Card, an analyzer is required; therefore, ignore the configurations shown without an analyzer when installing these emulator control cards.

- a. Turn off power to the 64000 station.
- b. Loosen the two hold-down screws and remove the card cage access cover (64100A). (Refer to 64110A Mainframe Service Manual for information on removing the card cage access cover of the 64110A.)
- c. Install the emulation subsystem (control card and pod). Refer to the appropriate service manuals for the emulator concerned.

- d. If an analyzer module (64300A or 64302A) is to be used, install it at this time. Refer to the 64300A/64302A Service Manuals for installation instructions.
- e. Install the Memory Controller Module (64151A or 64155). Refer to the Service Manual for the Memory Controller in use for installation instructions. Do not install the Emulation Memory Boards or ribbon cables. This will be done later.
- f. The address range jumpers on the Emulation Memory Boards must now be configured to select the base address range of each Memory Board (64161A/162A/163A) used in the mainframe. The address range selection is dependent on the number of Memory Boards installed in the development station. Refer to Table 2-1 through 2-4 and Figure 2-3 for information on where jumpers should be installed.
- g. Once the address range jumper on each board is in the proper position, the Memory Boards must be installed in the development station. (Please refer to the Memory Space Configuration in the paragraphs beginning at 2-7 before installing your memory system.) Hold the board by the extractor levers, with the component side of the board facing the front of the development station, and the large motherboard connector (labeled "P1") pointing towards the bottom of the station. Insert the board in the guide rails of the desired slot and push down until the P1 connector seats firmly in the motherboard connector at the bottom of the station.
- h. Connect the Emulation Memory Bus ribbon cable across the left-hand set of edge connectors (as you face the front of the development station). The bus cables are keyed so that they will fit on the edge connectors in only one position.
- i. Connect the Emulation Bus cables across the two right-hand sets of edge connectors (as you face the front of the development station). The bus cables are keyed so that they will fit on the edge connectors in only one position.
- j. Reinstall the card cage access cover and tighten the 2 screws (64100A). (Refer to the 64110A Mainframe Service Manual for information on replacing the card cage access cover of the 64110A.)

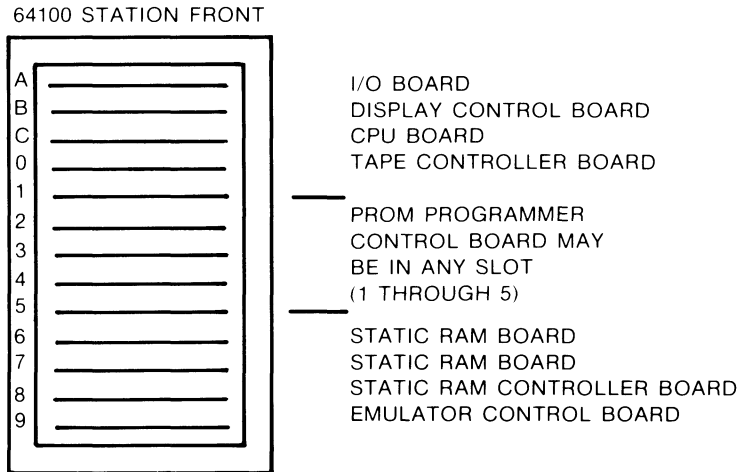


Figure 2-1. Emulation Memory Installation (with 6416X series memory only)


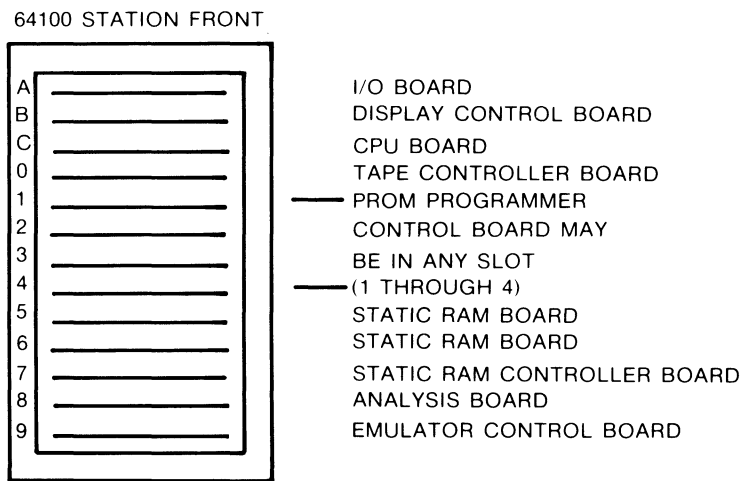


Figure 2-2. Emulation Memory Installation with Analysis

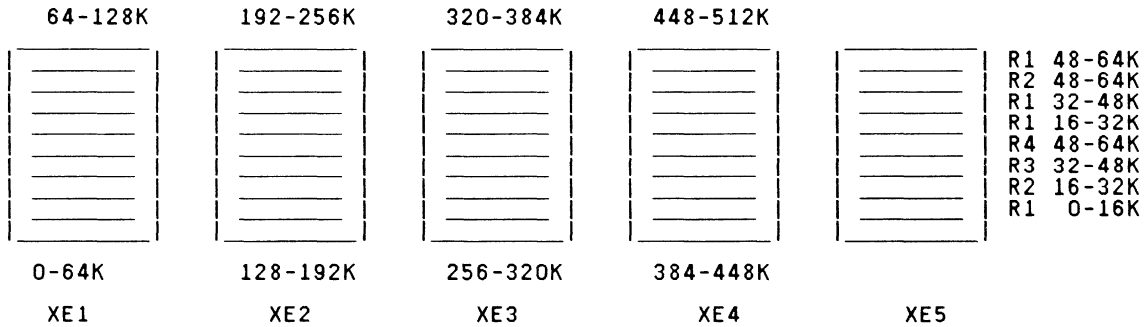

XE1-4 determine the addressable range of the Memory Card. The primary purpose for XE5 is to configure the 6416X series Memory to be compatible with the 6415X series Memory. XE5 performs row mapping. The following guidelines will help you avoid memory mapping errors.

When using 6416X series Memory Cards only.

1. The memory space defined by the 8-pin DIP jumper in XE1-4 may not overlap the address space assigned to any other memory card in systems using 64161A.
2. When using the 64161A the jumper in XE5 must be in the row 1-4.
3. When using a mixture of 64162A and 64163A cards the address space assigned in XE5 must not overlap when more than one card is assigned to the same address space in XE1-4.

When using a mixture of 6416X and 6415X Memory Cards.

1. When combining 6416X and 6415X Memory Cards you cannot assign address space higher than 64K words.
2. Be certain that the address space assigned to one card does not overlap the address space assigned to any other card.
3. Follow the configuration guides in Table 2-1 to Table 2-4. Figure 2-3. Address Range Jumper Installation

2-7. MEMORY SPACE CONFIGURATION GUIDE

2-8. MEMORY SPACE CONFIGURATIONS WITH THE 64151A STANDARD MEMORY CONTROLLER

Model 64161A

64161A (128k bytes) cannot be attached to a 64151A memory controller that is attached to any of the 64152A/3A/4A or 64152B/3B/4B memory boards. A 64161A Memory Board must have an 8-pin DIP jumper in row 1-4 of XE5. Another 8-pin DIP jumper must be located in the 0-64k address range position in XE1.

Model 64162A

The 64162A (32K words) would normally be all the memory that could be used with the 64151A Memory Controller. Although the 64151A can be configured for 16 bit operation, the Model 64155A is usually recommended for 16 bit emulation. If your 16-bit emulation system permits the use of the 64151A Memory Controller, follow the configuration guide listed in Table 2-2 to expand to 64K words of memory.

Model 64163A

One of these boards may be attached to a Model 64151A along with one of the 64152/3/4 memory boards. If 6416X and 6415X memory boards are used together install the 6416X memory boards next to the 64151A Memory Controller. The 8-pin DIP jumper on the 64163A must be in XE1 in the position labeled 0-64K; the single jumper must be in XE5, in a position labeled R1. The address space of the 64152/3/4 memory boards being used must not overlap the address space assigned to the 64163A. Possible combinations of the 64163A and 64152/3/4 memory boards are listed in Table 2-1. Refer to Table 2-3 to assign address space to 64k word configurations when using the 64163A. The 8-pin DIP jumper must be in XE1, address range 0-64k on the 64162A board. The two single jumpers must be in XE5; one must be in a position labeled R1 and the other must be in a position labeled R2. The address space of R1 and R2 must not overlap. With 16-bit emulation two 64162A cards may be used.

Table 2-1.

	64163 row 1	64152/3/4
1	0-16K	16-32K
2	16-32K	0-16K

2-9. MEMORY CONFIGURATIONS WITH THE 64155A WIDE MEMORY CONTROLLER
(with the 6416X memory you must use the 64155-66502 version)

Model 64161A

64161A (128k bytes) cannot be attached to a 64155A Memory Controller that is attached to any of the 64152/3/4 Memory Boards. A 64161A Memory Board must have a 8-pin DIP jumper in row 1-4 of XE5. Another 8-pin DIP jumper must be located in any one of the eight possible address range positions in XE1-XE4.

Model 64162A

The 64162A (64k bytes) can be used with a memory controller which has 64152A/64153A/64154A and/or 64152B/64153B/64154B Memory Boards. If 6416X and 6415X memory boards are used together DO NOT install the 6416X memory boards next to the 64155A Memory Controller. The 8-pin DIP jumper must be in XE1, address range 0-64k on the 64162A board. The two single jumpers must be in XE5; one must be in a position labeled R1 and the other must be in a position labeled R2. The address space of labels R1 and R2 must not overlap. The address space of the 64152/153/154 must not overlap the address space of the 64162A. A sample of address range configurations are listed in Table 2-2.

Table 2-2.

	64162		64152/3/4	64152/3/4
	row 1	row 2		
1*	0-16k	16-32k	32-48k	48-64k
2*	0-16k	48-64k	16-32k	32-48k
3+	16-32k	48-64k	0-16k	32-48k
4+	32-48k	16-32k	0-16k	48-64k
5+	32-48k	48-64k	0-16k	16-32k
6+	48-64k	16-32k	0-16k	32-48k

*In configuration 1 and 2 if there is only one 64152/3/4 it can occupy either address space listed for the 64152/3/4 boards.
+In configurations 3-6 there must be a block of memory with physical location at 0-16k; if there is only one 64152/3/4 it must be set to location 0-16k.

Model 64163A

One, two, or three of these boards can be attached to a memory control board along with three, two or one of the 64152/3/4 memory boards. If 6416X and 6415X memory boards are used together DO NOT install the 6416X memory boards next to the 64155 Memory Controller.

The 8-pin DIP jumper on the 64163A must be in XE1 in the position labeled 0-64k; Each board has a single jumper which must be put in a position labeled R1. If more than one of the 64163A Memory Boards are being used the address space of the R1 labels must not overlap.

The address space of the 64152/3/4 memory boards being used must not overlap the address space assigned to the 64163A memory boards being used. Possible combinations of 64152/3/4 memory boards and 64163A memory boards are listed in Table 2-3.

Table 2-3.

	64163 row 1	64152/3/4	64152/3/4	64152/3/4
1*	0-16k	16-32k	32-48k	48-64k
2+	16-32k	0-16k	32-48k	48-64k
3+	32-48k	0-16k	16-32k	48-64k
4+	48-64k	0-16k	16-32k	32-48
	64163 row 1	64163 row 1	64152/3/4	64152/3/4
5*	0-16k	16-32k	32-48k	48-64k
6*	0-16k	32-48k	16-32k	48-64k
7*	0-16k	48-64k	16-32k	32-48k
8+	16-32k	32-48k	0-16k	48-64k
9+	16-32k	48-64k	0-16k	32-48k
10+	32-48k	48-64k	0-16k	16-32k
	64163 row 1	64163 row 1	64163 row 1	64152/3/4
11	0-16k	16-32k	32-48k	48-64k
12	0-16k	32-48k	48-64k	16-32k
13	0-16k	16-32k	48-64k	32-48k
14+	16-32k	32-48k	48-64k	0-16k

*in configurations 1,5,6,7 if there is only one 64152/3/4 memory board it can occupy either address space listed for 64152/3/4 memory boards.

+in configurations 2-4,8-10, 14; there must be a block of memory located at 0-16k, so one of the 64152/3/4 memory boards must be set to location 0-16k.

Model 64162 with Model 64163

A combination of 64162A and 64163A boards may be attached to a memory controller with one 64152/3/4 memory board.

The 8-pin DIP jumper on the 64162 and the 64163 must be in the position 0-64k. For the two single jumpers of the 64162, one must be in a position labeled with R1 and the other must be in a position labeled with R2. The single jumper must be in a position labeled R1 on the 64163. The address spaces of the single jumpers must not overlap each other.

The address space assigned to each board must not overlap the address space assigned to any of the other boards.

Table 2-4

	64162		64163	64163
	row 1	row 2	row 1	row 1
1	0-16k	16-32k	32-48k	48-64k
2	0-16k	16-32k	48-64k	32-48k
3	0-16k	48-64k	16-32k	32-48k
4	0-16k	48-64k	32-48k	16-32k
5	16-32k	48-64k	0-16k	32-48k
6	16-32k	48-64k	32-48k	0-16k
7	32-48k	16-32k	0-16k	48-64k
8	32-48k	16-32k	48-64k	0-16k
9	32-48k	48-64k	0-16k	16-32k
10	32-48k	48-64k	16-32k	0-16k
11	48-64k	16-32k	0-16k	32-48k
12	48-64k	16-32k	32-48k	0-16k

2-10. OPERATING ENVIRONMENT.

2-11. The 64161A/162A/163A may be operated in environments within the following limits:

- Temperature.....0°C to 40°C
- Humidity.....5 to 80% relative humidity at 40°C
- Altitude.....4 600 M (15 000 ft)

It should be protected from temperature extremes which cause condensation within the instrument.

2-12. STORAGE AND SHIPMENT.

2-10. Environment.

2-13. The 64161A/162A/163A may be stored or shipped in environments within the following limits:

- Temperature.....-40° C to +75° C
- Humidity.....5 to 80% relative humidity
- Altitude.....15 000 m (50 000 ft)

2-14. Packaging.

2-15. Original Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-17. Other Packaging. The following general instructions should be used for repacking with commercially available materials:

- a. Wrap instrument in heavy paper or plastic. (If shipping to Hewlett-Packard office or service center, attach tag indicating service required, return address, model number, and full serial number.)
- b. Use strong shipping container. A double-wall carton made of 350-pound test material is adequate.
- c. Use a layer of shock-absorbing material 70 to 100 mm (3- to 4-inch) thick around all sides of the instrument to provide firm cushioning and prevent movement inside container.
- d. Seal shipping container securely.
- e. Mark shipping container FRAGILE to ensure careful handling.
- f. In any correspondence, refer to instrument by model number and full serial number.

SECTION III

OPERATION

Operation of the Model 64161A/162A/163A is beyond the scope of this manual. Emulation memory is an integral part of the emulation subsystem.

SECTION IV

PERFORMANCE VERIFICATION AND TROUBLESHOOTING

4-1. INTRODUCTION.

4-2. This section describes the Performance Verification for the Models 64161A/64162A/64163A Emulation Memory Boards.

4-3. This section is divided into two subsections: How to Run Performance Verification, and How to Interpret Performance Verification. Although the first subsection provides instructions on running several tests, only two tests will be described in the interpretation.

4-4. Use the following instructions to find the paragraphs which describe the Performance Verification of your system.

a. Be certain that your Memory subsystem is installed according to the directions in Section II.

b. For a system that is configured with a 64151A Memory Control Board.

4-9. How to Run Performance Verification

4-15. How to Interpret Performance Verification

c. For a system that is configured with a 64155 Memory Control

4-12. How to Run Performance Verification with a mixture of 6416X and 6415X Memory Boards.

4-12. How to Run Performance Verification with only 6416X memory boards.

4-20. How to Interpret Performance Verification.

4-5. PERFORMANCE VERIFICATION.

4-6. The Performance Verification for the Models 64161A/64162A/64163A Emulation Memory is a subset of the 64000 system opt test Performance Verification. The opt test Performance Verification tests all possible option modules that can be configured within the expansion slots of the 64000 mainframe. Table 4-1 defines the softkey options available.

4-7. The scope of the Performance Verification procedures in this section is to provide the minimum amount of information necessary to completely verify the operation of the Emulation Memory Boards. Procedures for complete verification of the Emulation Memory subsystem are treated in the Service Manuals for the Emulation Memory Controllers and are not repeated here (although the user may be referred to these manuals while using the Performance Verification procedures).

Table 4-1. Option Test Softkey Definitions

<end>	Causes the test currently executing to abort and returns to the overview menu.
<cycle>	Causes the performance verification software to test each block of memory in turn, stepping to the next block as the testing of each block is completed.
<next_test>	Causes the inverse video bar to move highlighting the address range of the next block of emulation memory to be tested.
<start>	Causes the performance verification software to begin testing emulation memory in the address range currently highlighted by the inverse video bar.
<print>	Causes the performance verification test results (the area above the status line on the display) to be copied to the system printer, if one is connected.
<prev_test>	Causes the inverse video bar to highlight the address range immediately prior to the one currently highlighted. Used to select a desired block of memory for testing.
<img_test>	Causes image testing to be commenced on the block of memory whose address range is highlighted by the inverse video bar on the display. Used to check for address line problems.
<retn_test>	Causes the Performance Verification software to initiate the retention testing sequence, which is used to verify that the static RAM will hold a "0" or "1" for a certain amount of time.
<print>	Causes the test results above the status line to be copied to the system printer if one is connected.

- 4-8. HOW TO RUN PERFORMANCE VERIFICATION.
- 4-9. Memory PV With Model 64151A Memory Controller.
(Configured in an 8-bit mode)
- 4-10. To run Performance Verification for the Emulation Memory Boards when a Model 64151A is being used as the emulation controller, use the following procedure:
- a. Disconnect the target system.
 - b. Install the Emulation Memory subsystem in the HP 64000 development station. Refer to Section II of this manual for installation instructions. NOTE: FOR PERFORMANCE VERIFICATION--IF YOU ARE USING A COMBINATION OF 6416X AND 6415X MEMORY BOARDS ONE OF THE 6416X MEMORY BOARDS MUST BE INSTALLED NEXT TO THE 64151 MEMORY CONTROLLER.
 - c. With the operating system initialized and awaiting a command , manually type or use the softkey:


```

opt_test      RETURN
<slot #> (of 64151A)  RETURN
<next_test> (until inverse video bar highlights the
                Processor Control Test)

<start>
<cycle>
      
```

This will test all available blocks of emulation memory.
NOTE: If emulation memory is unavailable in any particular address range, then "FFFF" will be displayed as the status; however, "# of fails" will be displayed as a "0".
 - d. If all available blocks of emulation memory test correctly, then the Emulation Memory Boards function correctly. It is then advisable to proceed with the remainder of the Emulation Memory subsystem testing as outlined in the appropriate Emulation Memory Controller Service Manual.

4-11. Memory Performance Verification with Model 64155A Memory Controller.

4-12. The following instructions cover Performance Verification for the Memory Controller and the Memory Boards. Only the "Memory Test" is described in this manual (paragraph 4-20). If the other tests fail, please refer to the 64155A Memory Control Service Manual. To run Performance Verification for the Emulation Memory Boards when a Model 64155A is being used as the Emulation Memory Controller, proceed as follows:

Running PV with a mixture of 6415X and 6416X memory boards.

- a. Disconnect the target system.
- b. Install the Emulation Memory subsystem in the HP64000 development station. Refer to Section II of this manual for installation instructions. NOTE: WHEN USING BOTH 6416X SERIES MEMORY AND 6415X MEMORY IN AN EMULATION SUBSYSTEM THE 6416X MEMORY BOARDS MUST NOT BE INSTALLED IN AN OPTION SLOT ADJACENT TO THE MODEL 64155 MEMORY CONTROLLER.

Running PV with 6416X Memory Boards only.

- a. Disconnect the target system.
- b. Install the Emulation Memory subsystem in the HP64000 development station. Refer to Section II of this manual for installation instructions. NOTE: FOR PERFORMANCE VERIFICATION--THE 6416X MEMORY BOARD MUST BE INSTALLED IN A SLOT ADJACENT TO THE MEMORY CONTROLLER.

The following steps are identical for any memory board configuration with the 64155A Memory Controller.

- c. With the operating system initialized and awaiting a command, manually type or use the softkey:

```
opt_test    RETURN
<slot #> (for 64155A) RETURN
select the memory range *
```

*select the maximum memory range in "K words" of the memory boards being tested. For example, if the highest memory range of the boards being tested is 256K-320K (as indicated by the jumper located in XE1,XE2,XE3,XE4) depress the softkey corresponding to that range. When using a mixture of 6416X and 6415X memory always select 0-64k. It is not necessary to RETURN.

```
<next_test> (until inverse video bar highlights the
              "System->Board Access Test")
<select>
```

This will display the "System->Board Access Test"

```
<cycle>
```

Cycle through the test several times. If no failures occur, press the <end> softkey which will return the display to the Memory Performance Verification overview menu.

```
<next_test> (until inverse video bar highlights the
              "Memory Mapper" test)
<select>
```

This will display the "Memory Mapper" test.

```
<cycle>
```

Cycle through the Memory Mapper test sequence several times. If no failures occur, press the <end> softkey to return to the Memory PV overview menu.

```
<next_test> (until inverst video bar highlights "Memory
              Control" test)
<select>
```

This will display the "Memory Control" test.

```
<cycle>
```

Cycle through the "Memory Control" test several times. If no failures occur, press the <end> softkey to return to the Memory PV overview menu.

```
<next_test> (until inverse video bar highlights "Memory
              Test")
```

```
<select>
```

This will display the "Memory Test"

```
<cycle>
```

NOTE: if emulation memory is unavailable in any particular address range, then "FFFF" will be displayed as the status; however, "# of fails" will be displayed as a "0".

Allow the "Memory Test" to cycle through the test several times. This will test all available blocks of memory up to the limit specified when the address range was selected. If desired, each individual block may also be tested for possible imaging problems and data retention failures by moving the highlighted inverse video bar to the desired block of memory with the <next_test> and <prev_test> keys, then pressing the <img_test> or <retn_test> softkeys to perform the necessary tests.

If all available blocks of memory test with no failures, then the Emulation Memory Boards work correctly. It is advisable to proceed with the remainder of the Emulation Memory Subsystem testing as outlined in the Emulation Memory Controller Service Manual.

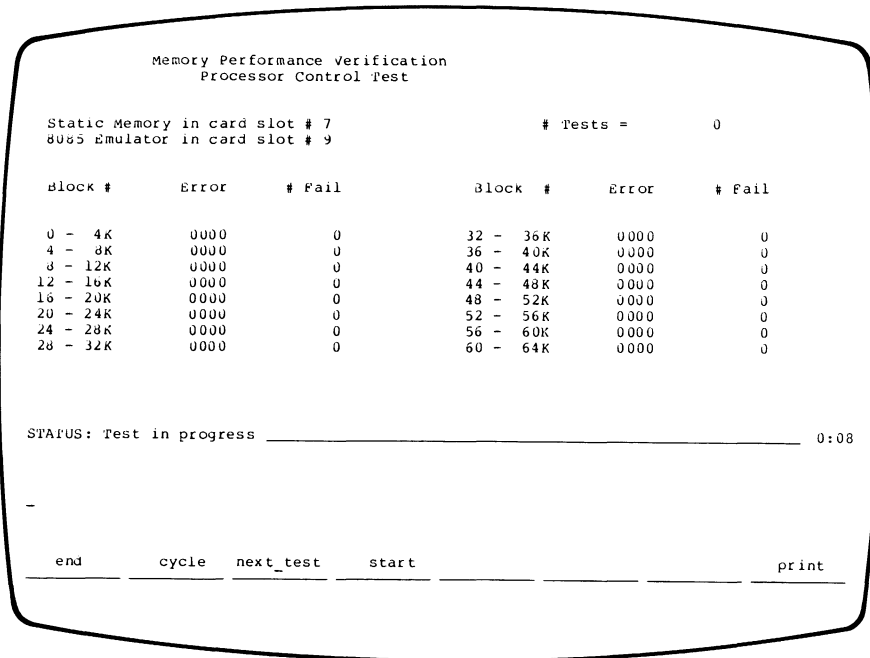


Figure 4-1. Processor Control Test Display.

4-13. HOW TO INTERPRET PERFORMANCE VERIFICATION.

4-14. Theory of Operation for the Memory Performance Verification is treated on a software test/results interpretation basis only; and is treated separately for Emulation Memory Boards driven by the 64151A and 64155 Emulation Memory Controllers.

4-15. Model 64151A/Emulation Memory--Processor Control Test.

4-16. Purpose--verifies that all the memory cells in a selected row can be written with random data patterns and that the data written can be read back correctly.

4-17. How--The Mainframe CPU initializes the Memory Controller Board and programs the memory mapper. Random data is then written to the first cell in the selected row of memory (a row is 16K deep by 16 bits wide). The data just written to this cell is immediately read back and compared with that written. The process then continues with each cell in turn. At the end of this process, the entire row of memory is read back and checked to verify that no RAM cells were overwritten by an address imaging problem (image testing is described further in the following paragraph). Errors are logged in a cumulative fashion to the status display.

4-18. Results--if no failures occur in the tested block of memory, the # fails indicator will be left at "0" and the "Error" message will display 0000 (hexadecimal), opposite the address range information for the selected block. However, if failures do occur in the tested block of memory, the # fails indicator will be incremented for each time that the test is run, and the "Error" message of 0000H will be replaced with a hexadecimal status message that indicates the position of the failing data bits. A "one" is placed in the status message for every data bit that is failing. To decode the status message, use the Table 4-1.

4-19. Because the memory is tested in 4K blocks and each IC is 16k long, imaging of 4K block sections is tested. The upper two address bits (A13, A12) are represented in the line "Image Errors" X1X2. If X1 is a "1" A13 is bad, if X0 is "1" A12 is bad.

Performance Verification Model 64161A/162A/163A

Table 4-2. Data Failure Status Decoding

XXXX	=	0000	0000	0000	0000	
		----	----	----	---1	D0
		----	----	----	--1-	D1
		----	----	----	-1--	D2
		----	----	----	1---	D3
		----	----	---	1	D4
		----	----	--1-	----	D5
		----	----	-1--	----	D6
		----	----	1---	----	D7
		----	---	1	----	D8
		----	--1-	----	----	D9
		----	-1--	----	----	D10
		----	1---	----	----	D11
		---	1	----	----	D12
		--1-	----	----	----	D13
		-1--	----	----	----	D14
		1---	----	----	----	D15

Table 4-3.

ERROR CODE	1	0	0	1	1	0	0	0	0	0	0	0	1	0	0	1
BINARY	0	0	0	1	1	1	0	0	0	0	0	0	1	0	0	1
1 0-16 16-32 32-48 48-64	U7P	U7Q	U7R	U7M	U7L	U7K	U7J	U7I	U7H	U7G	U7F	U7E	U7D	U7C	U7B	U7A
2 16-32 48-64	U6P	U6Q	U6N	U6M	U6L	U6K	U6J	U6I	U6H	U6G	U6F	U6E	U6D	U6C	U6B	U6A
3 32-48	U5P	U5Q	U5R	U5M	U5L	U5K	U5J	U5I	U5H	U5G	U5F	U5E	U5D	U5C	U5B	U5A
4 48-64	U4P	U4Q	U4N	U4M	U4L	U4K	U4J	U4I	U4H	U4G	U4F	U4E	U4D	U4C	U4B	U4A
ROW ADDRESS RANGE																
DATA BITS	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
DATA BUFFERS	U3N				U3M				U3L				U3K			
	UPPER BYTE								LOWER BYTE							

4-20. Memory Test with the 64155 Controller.

4-21. Purpose--Verifies that all memory cells in the selected row can be written with random data patterns and that the data written can be read back correctly. If desired, the test can also verify that no address imaging problems exist, and that the RAM cells can retain data for a certain amount of time.

4-22. What--Each possible test is described in the paragraphs below.

- a. Memory Test. The Mainframe CPU initializes the Memory Controller Board and programs the memory mapper. Random data is then written to the first cell in the selected row of memory (a row is 16K deep by 16 bits wide). The data just written to this cell is immediately read back and compared with that written. The process then continues with each cell in turn. At the end of this process, the entire row of memory is read back and checked to verify that no RAM cells were overwritten by an address imaging problem (image testing is described further in the following paragraph). Errors are logged in a cumulative fashion to the status display.
- b. Image Test. If the <img_test> softkey is pressed, the Performance Verification software initiates image testing of the selected row of RAM. This testing checks for open or shorted address lines. The reasons for and process of image testing are best explained by examining the case of an 8 X 1 RAM device.

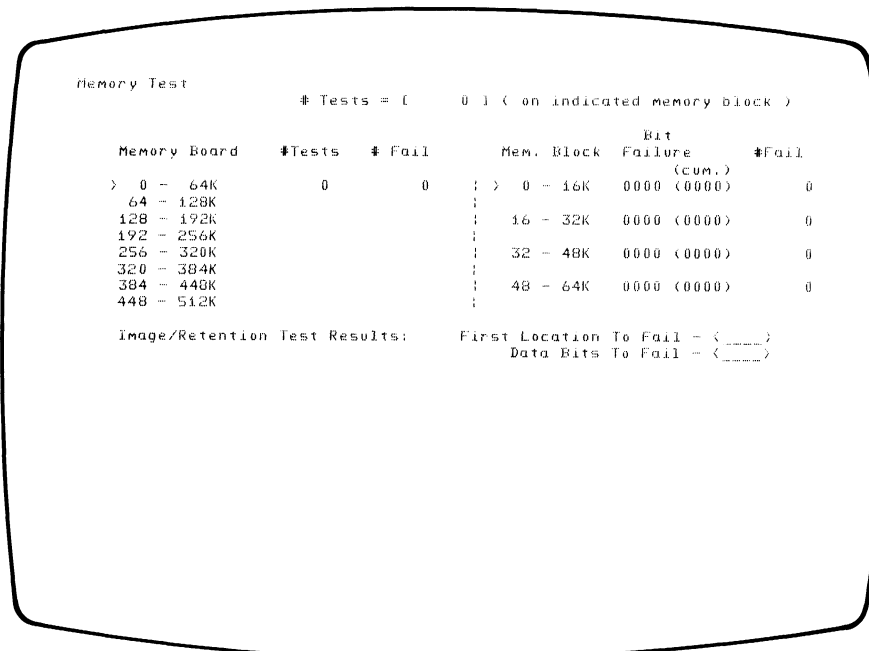


Figure 4-2. Memory Test Display

Suppose we proceed to image test the RAM, and there are no address line problems or other problems associated with the RAM. We would proceed with image testing the Most Significant address line of the RAM by pulling it low, then high, while incrementing the least significant address bits. Note that at the same time that the most significant address bit is changed, we also change the data written into the RAM from a "0" to a "1". The loaded RAM appears as follows:

8 x 1 RAM	
ADDRESS	DATA
000	0
001	0
010	0
011	0
100	1
101	1
110	1
111	1

If the data is now read back, and there are no address line problems, then the correct data is interpreted as coming from each location.

Now let's examine the same situation, but with a different twist. We're still testing the most significant address bit for an imaging problem, but this time, it's not making contact with the address input of the RAM because of a bad socket (or for whatever other reason). Note: it is important to remember that unconnected inputs in TTL and MOS generally float to the high state. When we try to load the first four locations, here's what happens:

8 x 1 RAM	
ADDRESS	DATA
000	x
001	x
010	x
011	x
100	0
101	0
110	0
111	0

No data is loaded into the first four locations because the most significant address line could not be pulled low.

Instead, the 0's are loaded into the next four locations because the most significant address bit floats to the high state. When the next four locations are loaded the results are as follows:

8 x 1 RAM

ADDRESS	DATA
000	x
001	x
010	x
011	x
100	1
101	1
110	1
111	1

Notice that the 1's are loaded into the correct locations, because the MSB address line has floated high, however, they overwrite the 0's that were written earlier.

What happens now? When the performance verification software attempts to read the RAM back, it will begin by attempting to read locations 000-011, at which it tried to store 0's. However, since the most significant address line is open, it reads back the 1's that were stored at 1000-111--which is the "image" of the lower address range. The 1's were not the correct response; therefore, an error message is displayed for locations 000-011. To troubleshoot this type of failure, the technician only needs to determine which address line would have to be open to cause one set of addresses to fail and another set of addresses to pass.

- c. Retention Test. This test checks the ability of each RAM cell to hold data for a defined length of time. To do this, the mainframe CPU writes 0's to every location in memory, waits 60 seconds, then reads every location back, The process is repeated by writing 1's to all locations, then reading the locations back after approximately 60 seconds. As soon as a failure is detected in either test, the testing is aborted.

4-23. Results.

- a. Memory Test. If no data failures are encountered during testing of the selected 64K address range, then the "#FAIL" status is left at 0. This information is displayed on the left hand side of the screen. If failures occur during the course of the test, then "# FAIL" status is incremented once for every time the test is run. The right side of the display divides each 64K memory block

into four 16K blocks which correspond to the four rows of memory chips. The "BIT FAILURE" status will display a hexadecimal status message indicating the position of the failing bits. To interpret the status message refer to Table 4-x.

- b. Image Test. If no failures are found during the image testing, then the "First Location to Fail" status and the "Data Bits to Fail" status will be left blank. These status lines are located directly across from the "Image/Retention Test Results" line on the display. If a failure is encountered during the course of the image testing, then the blank "First Location to Fail" status will be replaced by a hexadecimal status message which shows the address of the first failure location; and the "Data Bits to Fail" status will be replaced by a hexadecimal status message which shows the data bits which failed at that locations. For information on decoding the data status, refer to Table 4-x.
- c. Retention Test. If no failures are found during the retention testing, then the "First Location to Fail" status and the "Data Bits to Fail" status will be left blank. These status lines are located directly across from the "Image/Retention Test Results" line on the display. However, if a failure is encountered during the retention testing, then the test aborts. The blank "First Location to Fail" status will be replaced with a hexadecimal status message which shows the address location of the memory cell that changed during the lag time between the write and the read; the "Data Bits to Fail" status will be replaced with a hexadecimal status message which shows the data RAM's that were unable to retain the information for the required length of time. For information on decoding the data status, refer to Table 4-1.

```

Wide Address Memory Controller Performance Verification
Static Memory Controller in card slot # 2

)System -> Board Access Test          # Failures  # Tests
Memory Mapper Test                    0            0
Memory Control Test                   0            0
Memory Test                            0            0
Emulation Access Test                  0            0
p NOTE: Remove Cables Leading to Emulation Controller
p      and Internal Analysis to Run This Test.
    
```

Figure 4-3. Performance Verification Overview Display

```

System -> Board Access Test

)Interrupt Status Test  Present  Cumulative  # Failures  # Tests
                       Result    Result      0            0
Access Status Test     0000     0000      0            0
    
```

Figure 4-4. System-Board Access Test Display

Memory Mapper Test		# Failures	# Tests
> 2 K word Block Size		0	0
128 Word Block Size		0	0
	Present Bit Failures	Cumulative Bit Failures	
System Data Bus	0000	0000 (supply shorts or opens)	
	0000	0000 (word mode)	
	0000	0000 (byte mode)	
System Address Bus	0000	0000 (walking ones)	
	0000	0000 (walking zeroes)	
Mapper Image Test	0000	0000 (walking ones)	
	0000	0000 (walking zeroes)	
System Address Register	0000	0000 (walking ones)	
	0000	0000 (walking zeroes)	

Figure 4-5. Memory Mapper Test Display

Memory Control Test		# Failures	# Tests
>Block Size Select Option Test		0	0
Real Time Access Option Test		0	0
Allow Writes to ROM Option Test		0	0
Memory Controller Interrupt Option Test		0	0

Figure 4-6. Memory Control Test Display

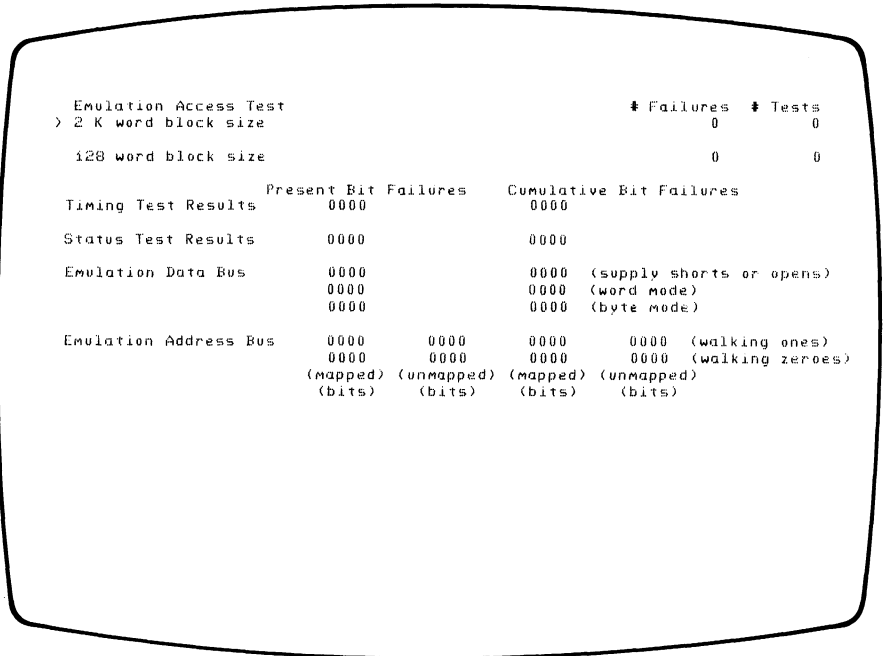


Figure 4-7. Emulation Access Test Display.

Model 64161A/162A/163A

Adjustments

SECTION V

ADJUSTMENTS

Models 64161A/162A/163A Emulation Memory require no adjustments.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering parts. Table 6-1 lists abbreviations used in the parts list and throughout the manual. Table 6-2 lists all replaceable parts in reference designator order. Table 6-3 contains names and addresses that correspond to the manufacturers' code numbers.

6-3. ABBREVIATIONS.

6-4. Table 6-1 lists abbreviations used in the parts list, the schematics and throughout the manual. In some cases, two forms of the abbreviations are used, one all in capital letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always all capitals. However, in the schematics and other parts of the manual, other abbreviation forms are used with both lower case and upper case letters.

6-5. REPLACEABLE PARTS LIST.

6-6. Table 6-2 is the list of replaceable parts and is organized as follows:

- a. Electrical assemblies and their components in alphanumerical order by reference designation.
- b. Chassis-mounted parts in alphanumerical order by reference designation.
- c. Miscellaneous parts.
- d. Illustrated parts breakdowns, if appropriate.

The information given for each part consists of the following:

- a. The Hewlett-Packard part number.
- b. The total quantity (Qty) in the instrument.
- c. The description of the part.
- d. A typical manufacturer of the part in a five-digit code.
- e. The manufacturer's number for the part.

The total quantity for each part is given only once--at the first appearance of the part number in the list.

6-7. ORDERING INFORMATION.

6-8. To order a part listed in the replaceable parts table, quote the Hewlett-Packard part number, indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

6-9. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard Office.

6-10. SPARE PARTS KIT.

6-11. At this time no Spare Parts Kit is available for this instrument

6-12. DIRECT MAIL ORDER SYSTEM.

6-13. Within the USA, Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are as follows:

a. Direct ordering and shipment from the HP Parts Center in Mountain View, California.

b. No maximum or minimum on any mail order (there is a minimum order amount for parts ordered through a local HP office when orders require billing and invoicing).

c. Prepaid transportation (there is a small handling charge for each order).

d. No invoices--to provide these advantages, a check or money order must accompany each order.

6-14. Mail order forms and specific ordering information is available through your local HP office. Addresses and phone numbers are located at the back of this manual.

Table 6-1. Reference Designators and Abbreviations

REFERENCE DESIGNATORS							
A	= assembly	F	= fuse	MP	= mechanical part	U	= integrated circuit
B	= motor	FL	= filter	P	= plug	V	= vacuum, tube, neon bulb, photocell, etc
BT	= battery	IC	= integrated circuit	Q	= transistor	VR	= voltage regulator
C	= capacitor	J	= jack	R	= resistor	W	= cable
CP	= coupler	K	= relay	RT	= thermistor	X	= socket
CR	= diode	L	= inductor	S	= switch	Y	= crystal
DL	= delay line	LS	= loud speaker	T	= transformer	Z	= tuned cavity network
DS	= device signaling (lamp)	M	= meter	TB	= terminal board		
E	= misc electronic part	MK	= microphone	TP	= test point		
ABBREVIATIONS							
A	= amperes	H	= henries	N/O	= normally open	RMO	= rack mount only
AFC	= automatic frequency control	HDW	= hardware	NOM	= nominal	RMS	= root-mean square
AMPL	= amplifier	HEX	= hexagonal	NPO	= negative positive zero (zero temperature coefficient)	RWV	= reverse working voltage
BFO	= beat frequency oscillator	HG	= mercury	NPN	= negative-positive-negative	S-B	= slow-blow
BE CU	= beryllium copper	HR	= hour(s)	NRFR	= not recommended for field replacement	SCR	= screw
BH	= binder head	HZ	= hertz	NSR	= not separately replaceable	SE	= selenium
BP	= bandpass	IF	= intermediate freq	OB	= order by description	SECT	= section(s)
BRS	= brass	IMPG	= impregnated	OH	= oval head	SEMICON	= semiconductor
BWO	= backward wave oscillator	INCD	= incandescent	OX	= oxide	SI	= silicon
CCW	= counter-clockwise	INCL	= include(s)	P	= peak	SIL	= silver
CER	= ceramic	INS	= insulation(ed)	PC	= printed circuit	SL	= slide
CMO	= cabinet mount only	INT	= internal	PF	= picrofarads= 10 ⁻¹² farads	SPG	= spring
COEF	= coefficient	K	= kilo=1000	PH BRZ	= phosphor bronze	SPL	= special
COM	= common	LH	= left hand	PHL	= phillips	SST	= stainless steel
COMP	= composition	LIN	= linear taper	PIV	= peak inverse voltage	SR	= split ring
COMPL	= complete	LK WASH	= lock washer	PNP	= positive-negative-positive	STL	= steel
CONN	= connector	LOG	= logarithmic taper	P/O	= part of	TA	= tantalum
CP	= cadmium plate	LPF	= low pass filter	POLY	= polystyrene	TD	= time delay
CRT	= cathode-ray tube	M	= milli=10 ⁻³	PORC	= porcelain	TGL	= toggle
CW	= clockwise	MEG	= meg=10 ⁶	POS	= position(s)	THD	= thread
DEPC	= deposited carbon	MET FLM	= metal film	POT	= potentiometer	TI	= titanium
DR	= drive	MET OX	= metallic oxide	PP	= peak-to-peak	TOL	= tolerance
ELECT	= electrolytic	MFR	= manufacturer	PT	= point	TRIM	= trimmer
ENCAP	= encapsulated	MHZ	= mega hertz	PWV	= peak working voltage	TWT	= traveling wave tube
EXT	= external	MINAT	= miniature	RECT	= rectifier	U	= micro=10 ⁻⁶
F	= farads	MOM	= momentary	RF	= radio frequency	VAR	= variable
FH	= flat head	MOS	= metal oxide substrate	RH	= round head or right hand	VDCW	= dc working volts
FIL H	= fillister head	MTG	= mounting			W/	= with
FXD	= fixed	MY	= "mylar"			W	= watts
G	= giga (10 ⁹)	N	= nano (10 ⁻⁹)			WIV	= working inverse voltage
GE	= germanium	N/C	= normally closed			WW	= wirewound
GL	= glass	NE	= neon			W/O	= without
GRD	= ground(ed)	NI PL	= nickel plate				

Table 6-2. Replaceable Parts List

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	64161-66501	8	1	BOARD ASSEMBLY-MEMORY 128K	28480	64161-66501
C1-C2	0160-5246	6	80	CAPACITOR-FXD .1 UF +80-20% 50 VDC CER	28480	0160-5246
C3-C4	0180-0229	4	4	CAPACITOR-FXD 22 UF +-10% 15 VDC TA	28480	0180-0229
C5-C62	0160-5246	6		CAPACITOR-FXD .1 UF +80-20% 50 VDC CER	28480	0160-5246
TP1-TP3	0360-0535	0	3	TERM TEST POINT	28480	0360-0535
R1-R2	0757-0280	3	6	RESISTOR 1K 1% .125W F TC=0+-100	28480	0757-0280
R3-R4	0698-3432	7	2	RESISTOR 26.1 1% .125W F TC=0+-100	28480	0698-3432
R5	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	28480	0757-0280
R6-R9	0757-0399	5	4	RESISTOR 82.5 1% .125W F TC=0+-100	28480	0757-0399
R10-R12	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	28480	0757-0280
XE1-XE5	1200-0607	0	5	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
E1-E2	1251-4398	1	2	SHUNT DIP 4 POSITION; DUAL INLINE PKG	28480	1251-4398
RP1	1810-0275	1	1	NETWORK-RES 10-SIP 1.0K OHM X 9	28480	1810-0175
UR3C-UR3F	1810-0600	6	4	NETWORK-RES 16-DIP 40.0 OHM X 8	28480	1810-0600
U2C	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2D	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2E	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2F	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2G	1820-2861	5	4	IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2H	1820-2861	5		IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2I	1820-2861	5		IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2J	1820-2861	5		IC DCDR TTL F 3-TO-8 LINE 3-INP	07263	74F138PC
U2K	1820-2690	9	1	IC GATE TTL F OR QUAD 2-INP	07263	74F32
U2L	1820-1198	0	2	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
U2M	1820-1198	0		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS03N
U3G	1820-1204	9	1	IC GATE TTL LS NAND DUAL 4-INP	01295	SN74LS20
U3J	1820-2684	1	1	IC GATE TTL F NAND QUAD 2-INP	07263	74F00
U3K	1820-1633	8	8	IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U3L	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U3M	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U3N	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U4A-U4P	1818-1969	8	64	IC CMOS F16384 (16K) STAT RAM 70NS	54013	HM6167P
U5A-U5P	1818-1969	8		IC CMOS F16384 (16K) STAT RAM 70NS	54013	HM6167P
U6A-U6P	1818-1969	8		IC CMOS F16384 (16K) STAT RAM 70NS	54013	HM6167P
U7A-U7P	1818-1969	8		IC CMOS F16384 (16K) STAT RAM 70NS	54013	HM6167P

See introduction to this section for ordering information

Table 6-3. List of Manufacturers' Codes

Mfr No.	Manufacturer Name	Address	Zip Code
00000 01295 07263 S4013	ANY SATISFACTORY SUPPLIER TEXAS INSTR INC SEMICOND CMPNT DIV FAIRCHILD SEMICONDUCTOR DIV HITACHI	DALLAS TX MOUNTAIN VIEW CA TOKYO JP	75222 94042

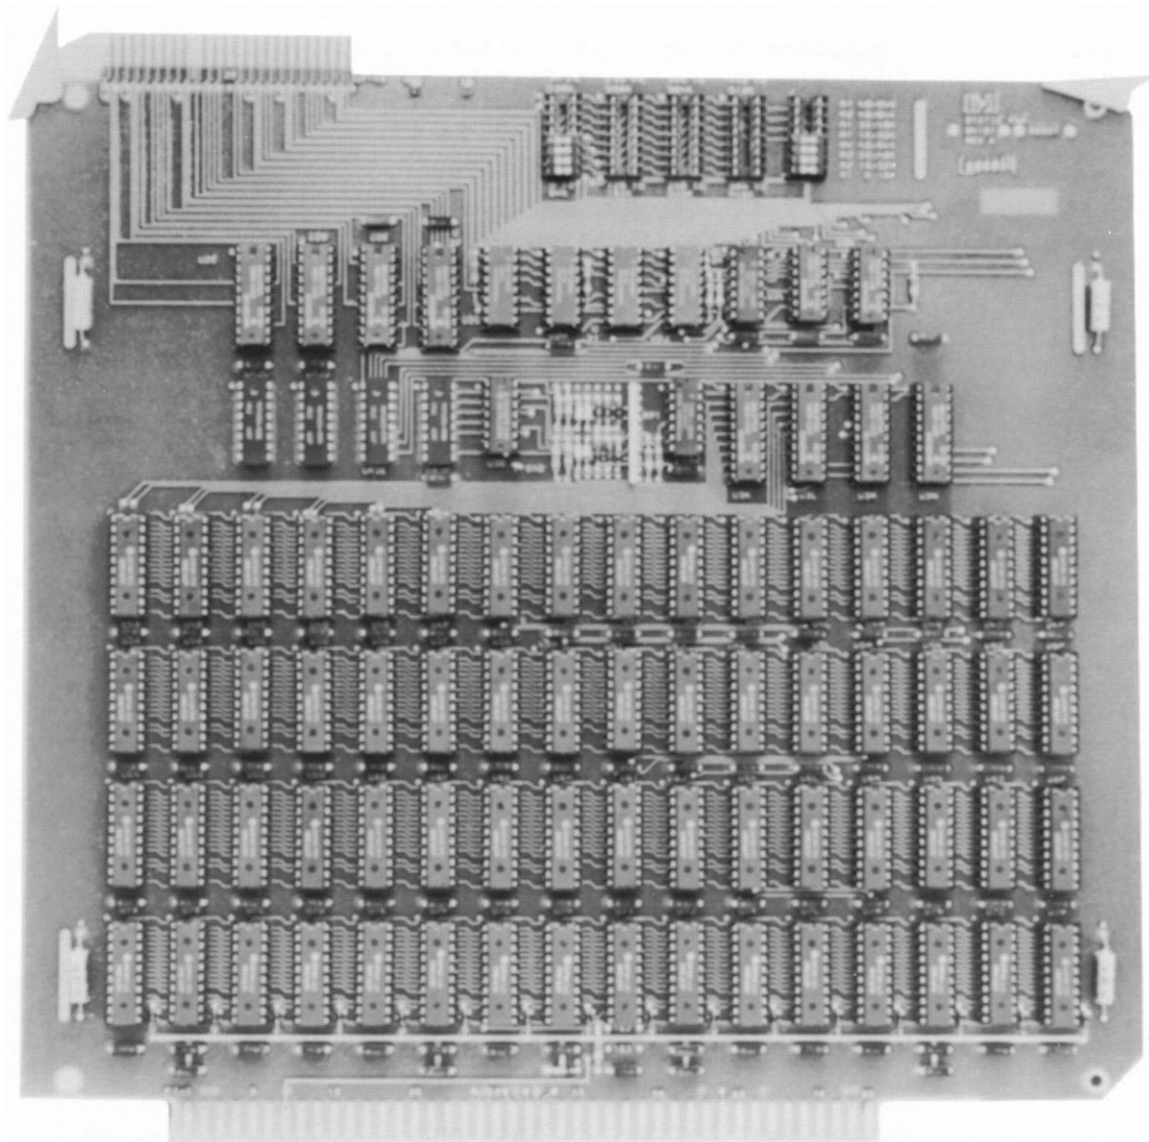


Figure 6-1. Replaceable Parts Locator

SECTION VII

MANUAL CHANGES

This section normally contains information for backdating this manual for models with repair numbers prior to the one shown on the title page. Because this edition includes the information for the first repair number there is no backdating material.

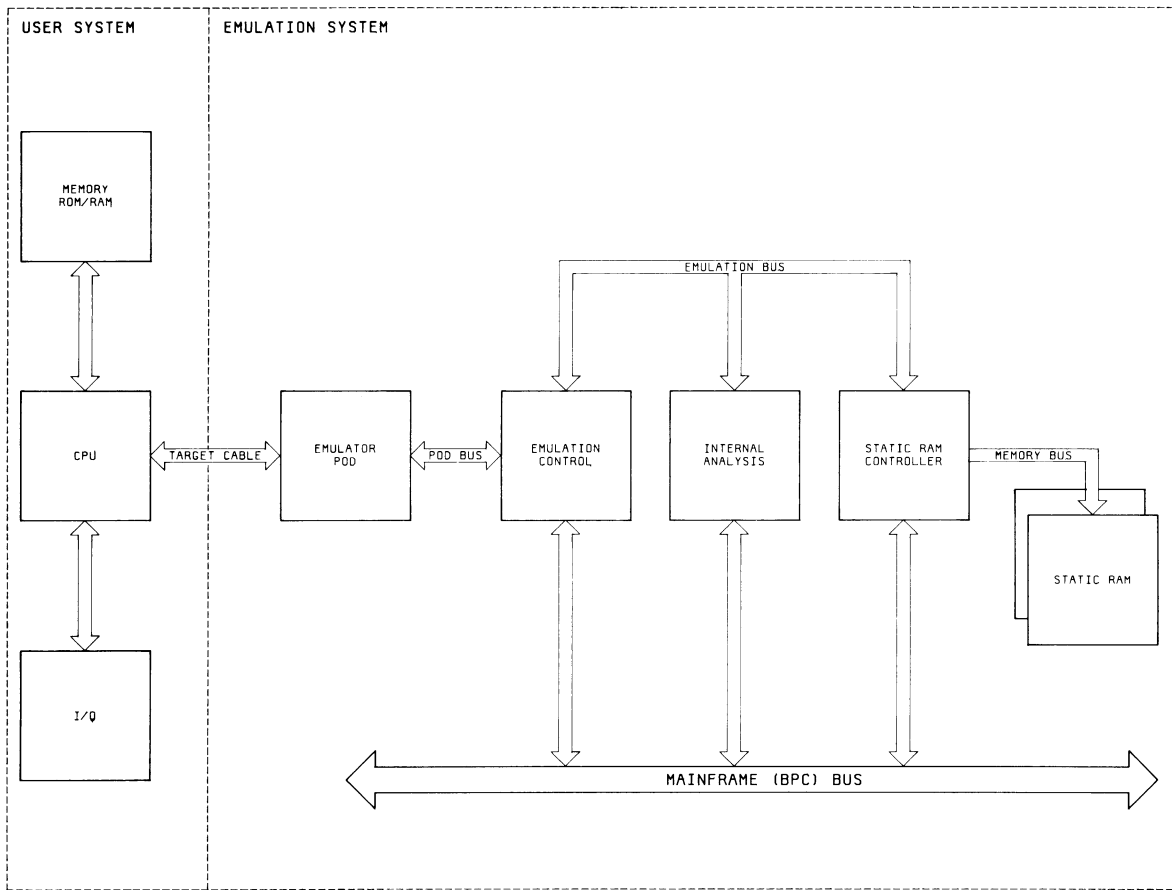


Figure 8-1. Emulation Subsystem

SECTION VIII

THEORY AND SCHEMATICS

8-1. INTRODUCTION.

8-2. This section contains block and component level theory and schematics for the 64161A, 64162A and 64163A Emulation Memories.

8-3. LOGIC CONVENTIONS. The positive logic convention is used for logic variables and circuits within the 64161A/162A/163A. Positive logic defines a "1" as the more positive voltage (high) and a "0" as the more negative logic (low).

8-4. LOGIC LEVELS. TTL high- 2.0 low 0.8

8-5. POWER SUPPLIES. The mainframe supplies +5 volts and +12 volts to the emulation memory for operating power.

8-6. The block diagram, schematic, component locator, and other service information are provided in foldout service sheets to help in servicing the emulation memory.

8-7. THEORY.

8-8. OVERVIEW.

8-9. The 64000 microprocessor emulation systems, illustrated in figure 1-2, allow software designers to develop and debug software modules for specific microprocessors. The emulation plug replaces the microprocessor physically in the target system permitting hardware in the emulation system to simulate the functions of the target microprocessor while driving target system hardware with the software being developed.

8-10. The emulation memory can be used to duplicate the target system memory. Address space can be allocated to target system EAM, target system ROM, emulation RAM, and emulation ROM, and illegal address space.

8-11. The Memory Controller is the interface between the emulation memory, the installed Emulator, and the 64000 operating system. This option also maps the users address received via the emulation bus into available emulation memory. The mapping process is performed by mapper RAM's which reside on the Memory Controller. A read/write operation to emulation memory is performed via the memory bus.

8-12. The mapper RAM's also output signals which specify what type of memory the given block of emulation memory is supposed simulate (RAM, ROM, or GUARDED Memory), or whether a given address is

to be regarded as user address space and not acted upon. The Memory Controller will also signal the analysis equipment and halt emulation when a GUARDED memory access is attempted and, if optionally configured, when a write to ROM is attempted.

8-13. When the 64161A/162A/163A Memory Boards are installed each Memory Board is hardwired with DIP jumpers to enable a specific memory range so that only one Memory Board will respond to each address.

8-14. The hardware on the Memory Boards simulates address decoder circuitry and some type of memory space which has been defined on the Memory Controller.

8-15. BLOCK THEORY.

8-16. The Model 64161A/162A/163A Block Diagram illustrates the three functional blocks of the memory board: decoder circuitry, address and data buffers, and the memory array. The decoder circuitry specifies the address range of the memory board, decodes the memory rows selected, produces a read enable signal and configures the 64162A and 64163A memory mapping to be compatible with 64152A, 64153A and 64154A memory boards. The address and data buffers drive the signals which are direct inputs to the RAM array.

8-17. U2G through U2J, ROW SELECT DECODERS, demultiplex the upper five address lines A14-A18 to select row numbers of the memory to be accessed. An 8-pin DIP jumper plugged into one of the sockets XE1-XE4 specifies the 64K word addressable range of the memory board.

8-18. The ADDRESS RANGE SELECT JUMPER, XE5 configures the 64162A and 64163A to be compatible with the 64152A, 64153A and 64154A memory boards. If the 64161A, 64162A, or 64163A are not combined with other memory boards an 8-pin DIP jumper should be plugged into the lower half of the socket. Please refer to Section II for complete information on the memory mapping configurations which are possible.

8-19. The network composed of R6-R9 and CR1,2,6,7 deselects the RAM array when the circuitry is powered up. Pulling the circuitry to +12 volts through RP1 brings the voltage in Row 1-4 up quickly when the system is powered on, and the zener diodes CR1,2,6,7 clamp the voltage at approximately +5 volts. This deselection process prevents the RAM array from drawing a large surge of current by putting the RAMs on their low power standby mode.

8-20. Whenever the ROW SELECT DECODERS pull one of the ROWS 1-4 low, the BOARD SELECT GATE, U3GB, produces HRDEN. The READ ENABLE GATE, U3JA, gates LWRT (high) and HRDEN to produce LRD.

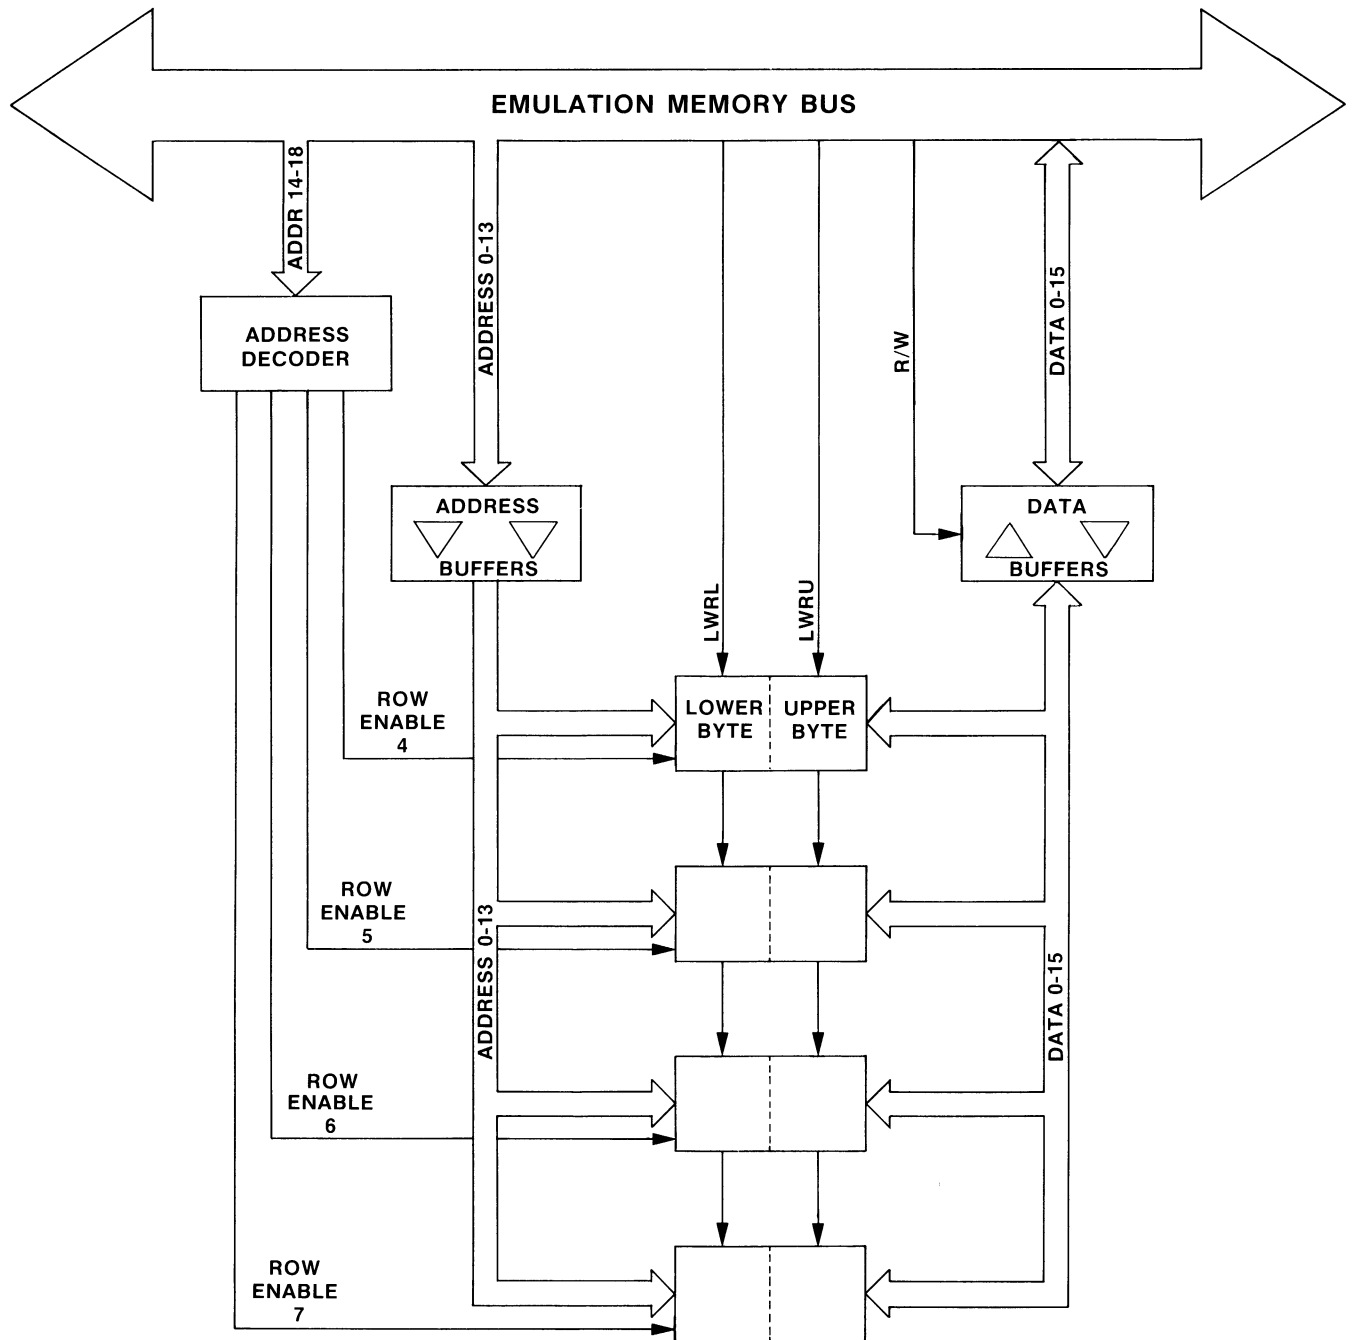


Figure 8-2. Emulation Memory Block Diagram.

8-21. From the Memory Controller on the Emulation Memory Bus the Memory Board receives 19 address lines, 16 data lines and three control lines. The 16 data lines and the lower 14 address lines are buffered through the DATA BUFFERS, U3K-U3N, and the ADDRESS BUFFERS, U2C-U2F, then used as direct inputs to the RAM array. CR11-26 and R12 form a pullup network for the data inputs to the RAMs. This guarantees that the proper voltage levels are applied to the RAM inputs during a write cycle so that correct data is written. LWRT is a directional control for the DATA BUFFERS. LWRL and LWRU enable the lower and/or upper bytes of the RAM array.

8-22. The RAM array consists of an upper byte and a lower byte, which may also be accessed as a single 16-bit word. The Hitachi 6167 16k x 1-bit static Rams feature 70 nsec access time, low power standby mode, low power operation and asynchronous operation.

8-23. Power and ground connections and an 8-bit I.D. signal are the only connections between the memory board and the mainframe. The codes produced by the EMULATION MEMORY BOARD ID CIRCUITRY are listed in Table 8-1.

Table 8-1. Memory Board ID Code.

CODE	# OF ROWS LOADED
01F8	4
01F9	2
01FA	1

8-24. MNEMONICS.

8-25. Signals in the 64161A/162A/163A/162A/163A have been assigned mnemonics which describe the active state and function of the signal line. A prefix letter (H, L, P, OR N) indicates the active state of the signal and the remaining letters indicate its function. An H prefix indicates that the function is active in the high state; an L prefix indicates that it is active in the low state. For devices that are edge sensitive the prefix "P" indicates that the function is active on the positive going edge; the prefix "N" indicates that the device is active on the negative going edge.

TO/FROM MEMORY CONTROLLER

- LED0-15 LOW EMULATOR DATA 0-15. Bidirectional bus between the data transceivers (U3K-U3N) and the emulation memory control board. This bus carries all data information for emulation processor and mainframe computer data transactions with emulation memory.
- LMA0-18 LOW MEMORY ADDRESS 0-18. Input to the address decoders and the address buffers from the emulation memory controller. These are active low lines. LMA14-LMA18 are input to the address decoders, which select the correct row of RAM for a transaction; and LMA0-13 are input to the address buffers, which drive the address lines of the RAM's to select the desired memory location within the row.
- LWRL LOW WRITE LOWER. Input to U2K from the Memory Controller. When low, indicates that the controller wishes to write data into the lower byte of the selected and addressed row of RAM (D0-7), either for an emulation or mainframe computer write cycle.
- LWRU LOW WRITE UPPER. Input to U2K from the emulation memory controller. When low, indicates that the controller wishes to write data into the upper byte of RAM (D8-15), either for an emulation or mainframe computer write cycle.
- RD/LWRT READ/WRITE. Input from the emulation memory control board to the data buffer control gating and the data transceiver control logic. A low on this line enables one-half of transceivers U3K-U3N so that data from the emulation memory controller may be driven to the RAM data inputs during a write cycle. When RD/LWRT is high it allows the transceivers to be oriented for a data read cycle whenever a row of RAM is selected on the board.

TO/FROM CPU MAINFRAME

LID LOW ID. Enables Memory Board to output its ID code onto the Low Data Bus to the CPU.

LSEL LOW SLOT SELECT. When low enables the slot select buffer on the mainframe.

LDO-8 LOW DATA 0-8. When low these lines identify the Memory Board to the Mainframe CPU.

01F8	64161A/162A/163A
01F9	64162A
01FA	64163A

LSTB LOW STROBE. Active low, during write operation, indicates data bus information is valid; during read operation indicates CPU is not driving the data bus and addressed device can drive data bus.

INTRABOARD MNEMONICS

A0-13" ADDRESS 0-13". Output from address buffers U2C-U2F, and input to the RAM array. These lines are used to select the desired memory location in the rows 3 and 4 of RAM for the data transfer (read or write cycle).

A0-13' ADDRESS 0-13'. Output from address buffers U2C-U2F, and input to the RAM array. These lines are used to select the desired memory location in the rows 1 and 2 of RAM for the data transfer (read or write cycle).

DIN0-15 DATA IN 0-15. Input to the RAM array from data transceivers U3k-3N. This bus is used to provide the desired information for storage in the selected RAM location during a data write cycle.

DOUT0-15 DATA OUT 0-15. Output to the memory bus from the RAM array through data transceivers Ux-Ux. Valid data will be presented on this bus by the selected row of the RAM array whenever a location is addressed, the CS/line is asserted, and the WE/ line of the RAM's is left high.

HRDEN HIGH READ ENABLE. Output generated by U3GB whenever any one of the four rows of memory are selected by the Row Select Decoders. When HRDEN and RD/LWRT are both high U3JA generates a low signal which enables the data transceivers U3K-U3N.

- LINVMA18 LOW INVERTED MEMORY ADDRESS 18. When this signal is low (LMA18 is high) and LMA17 is high U2J is enabled; when this signal is low and LMA 17 is low U2I is enabled.
- LRD LOW READ. This signal, generated when HRDEN and RD/WRT are both high enables the data transceivers to be read.
- ROWSEL1-4 ROW SELECT 1-4. Output from the pullup/damping network (CR1-7 and RP1,R6-9), which is driven by the address decoders through the address range jumpers. A low on one of these lines selects the corresponding row of RAM for a data transaction by asserting the RAM's chip select line.

Table 8-2. Logic Symbols

GENERAL

All signals flow from left to right, relative to the symbol's orientation with inputs on the left side of the symbol, and outputs on the right side of the symbol (the symbol may be reversed if the dependency notation is a single term.)


All dependency notation is read from left to right (relative to the symbol's orientation).

An external state is the state of an input or output outside the logic symbol.


An internal state is the state of an input or output inside the logic symbol. All internal states are True = High.

SYMBOL CONSTRUCTION

Some symbols consist of an outline or combination of outlines together with one or more qualifying symbols, and the representation of input and output lines.

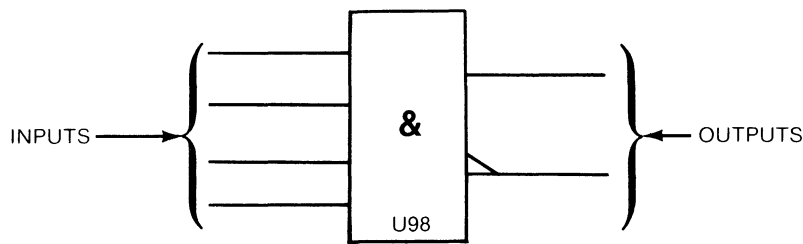

Some have a common Control Block with an array of elements:

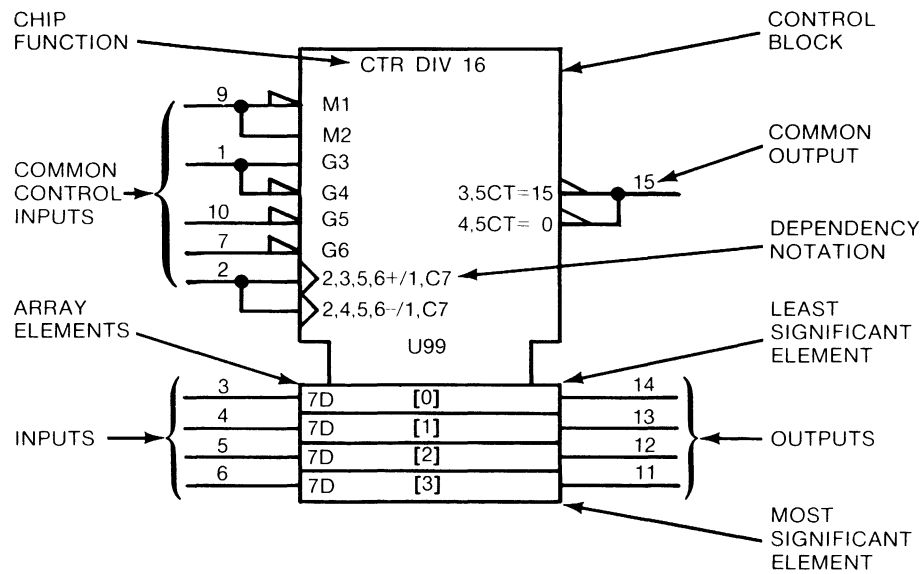

CONTROL BLOCK - All inputs and dependency notation affect the array elements directly. Common outputs are located in the control block. (Control blocks may be above or below the array elements.)

ARRAY ELEMENTS -All array elements are controlled by the control block as a function of the dependency notation. Any array element is independent of all other array elements. Unless indicated, the least significant element is always closest to the control block. The array elements are arranged by binary weight. The weights are indicated by powers of 2 (shown in []).

Table 8-2. Logic Symbols (con't)

INPUTS - Inputs are located on the left side of the symbol and are affected by their dependency notation.

Common control inputs are located in the control block and control the inputs/outputs to the array elements according to the dependency notation.

Inputs to the array elements are located with the corresponding array element with the least significant element closest to the control block.

OUTPUTS - Outputs are located on the right side of the symbol and are effected by their dependency notation.

Common control outputs are located in the control block.

Outputs of array elements are located in the corresponding array element with the least significant bit closest to the control block.

CHIP FUNCTION - The labels for chip functions are defined, i.e., CTR - counter, MUX - multiplexer.

DEPENDENCY NOTATION

Dependency notation is always read from left to right relative to the symbol's orientation.

Dependency notation indicates the relationship between inputs, outputs, or inputs and outputs. Signals having a common relationship will have a common number, i.e., C7 and 7D...C7 controls D. Dependency notation 2,3,5,6+/1,C7 is read as when 2 and 3 and 5 and 6 are true, the input will cause the counter to increment by one count....or (/) the input (C7) will control the loading of the input value (7D) into the D flip-flops.

The following types of dependencies are defined:


 
 

 

 
 




 

 

 

 
 
 
 
 
 

 
 
- a. AND (G), OR (V), and Negate (N) denote Boolean relationship between inputs and outputs in any combination.
- b. Interconnection (Z) indicates connections inside the symbol.
- c. Control (C) identifies a timing input or a clock input of a sequential element and indicates which inputs are controlled by it.
- d. Set (S) and Reset (R) specify the internal logic states (outputs) of an RS bistable element when the R or S input stands at its internal 1 state.
- e. Enable (EN) identifies an enable input and indicates which inputs and outputs are controlled by it (which outputs can be in their high impedance state).
- f. Mode (M) identifies an input that selects the mode of operation of an element and indicates the inputs and outputs depending on that mode.
- g. Address (A) identifies the address inputs.
- h. Transmission (X) identifies bi-directional inputs and outputs that are connected together when the transmission input is true.

DEPENDENCY NOTATION SYMBOLS

A	Address (selects inputs/outputs) (indicates binary range)	N	Negate (compliments state)
C	Control (permits action)	R	Reset Input
EN	Enable (permits action)	S	Set Input
G	AND (permits action)	V	OR (permits action)
M	Mode (selects action)	Z	Interconnection
		X	Transmission

Table 8-2. Logic Symbols (con't)

OTHER SYMBOLS

	Analog Signal		Inversion		Shift Right (or down)
	AND		Negation		Solidus (allows an input or output to have more than one function)
	Bit Grouping		Nonlogic Input/Output		Tri-State
	Buffer		Open Circuit (external resistor)		Causes notation and symbols to effect inputs/outputs in an AND relationship, and to occur in the order read from left to right.
	Compare		Open Circuit (external resistor)		Used for factoring terms using algebraic techniques.
	Dynamic		OR		Information not defined.
	Exclusive OR		Passive Pull Down (internal resistor)		Logic symbol not defined due to complexity.
	Hysteresis		Passive Pull Up (internal resistor)		
	Interrogation		Postponed		
	Internal Connection		Shift Left (or up)		

LABELS

BG	Borrow Generate	CO	Carry Output	J	J Input
BI	Borrow Input	CP	Carry Propagate	K	K Input
BO	Borrow Output	CT	Content	P	Operand
BP	Borrow Propagate	D	Data Input	T	Transition
CG	Carry Generate	E	Extension (input or output)	+	Count Up
CI	Carry Input	F	Function	-	Count Down

MATH FUNCTIONS

	Adder	>	Greater Than
ALU	Arithmetic Logic Unit	<	Less Than
COMP	Comparator	CPG	Look Ahead Carry Generator
DIV	Divide By	π	Multiplier
=	Equal To	P-Q	Subtractor

CHIP FUNCTIONS

BCD	Binary Coded Decimal	DIR	Directional	RAM	Random Access Memory
BIN	Binary	DMUX	Demultiplexer	RCVR	Line Receiver
BUF	Buffer	FF	Flip-Flop	ROM	Read Only Memory
CTR	Counter	MUX	Multiplexer	SEG	Segment
DEC	Decimal	OCT	Octal	SRG	Shift Register

DELAY and MULTIVIBRATORS


 

 

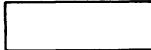










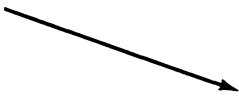
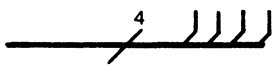
	Astable
	Delay
	Nonretriggerable Monostable
NV	Nonvolatile
	Retriggerable Monostable

Table 8-3. Schematic Diagram Notes

	ETCHED CIRCUIT BOARD	(925)	WIRE COLORS ARE GIVEN BY NUMBERS IN PARENTHESES USING THE RESISTOR COLOR CODE
	FRONT PANEL MARKING		[(925) IS WHT-RED-GRN]
	REAR-PANEL MARKING		0 - BLACK 5 - GREEN 1 - BROWN 6 - BLUE 2 - RED 7 - VIOLET 3 - ORANGE 8 - GRAY 4 - YELLOW 9 - WHITE
	MANUAL CONTROL		* OPTIMUM VALUE SELECTED AT FACTORY, TYPICAL VALUE SHOWN; PART MAY HAVE BEEN OMITTED.
	SCREWDRIVER ADJUSTMENT		
	ELECTRICAL TEST POINT TP (WITH NUMBER)		UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS CAPACITANCE IN PICOFARADS INDUCTANCE IN MICROHENRIES
	NUMBERED WAVEFORM NUMBER CORRESPONDS TO ELECTRICAL TEST POINT NO.	μP = MICROPROCESSOR	
	LETTERED TEST POINT NO MEASUREMENT AID PROVIDED	P/O = PART OF	
	COMMON CONNECTIONS. ALL LIKE-DESIGNATED POINTS ARE CONNECTED.	NC = NO CONNECTION	
	NUMBER ON WHITE BACKGROUND = OFF-PAGE CONNECTION. LARGE NUMBER ADJACENT = SERVICE SHEET NUMBER FOR OFF-PAGE CONNECTION.	CW = CLOCKWISE END OF VARIABLE RESISTOR	
	CIRCLED LETTER = OFF-PAGE CONNECTION BETWEEN PAGES OF SAME SERVICE SHEET.		
	INDICATES SINGLE SIGNAL LINE		
	NUMBER OF LINES ON A BUS		
			

STD-20-09-81


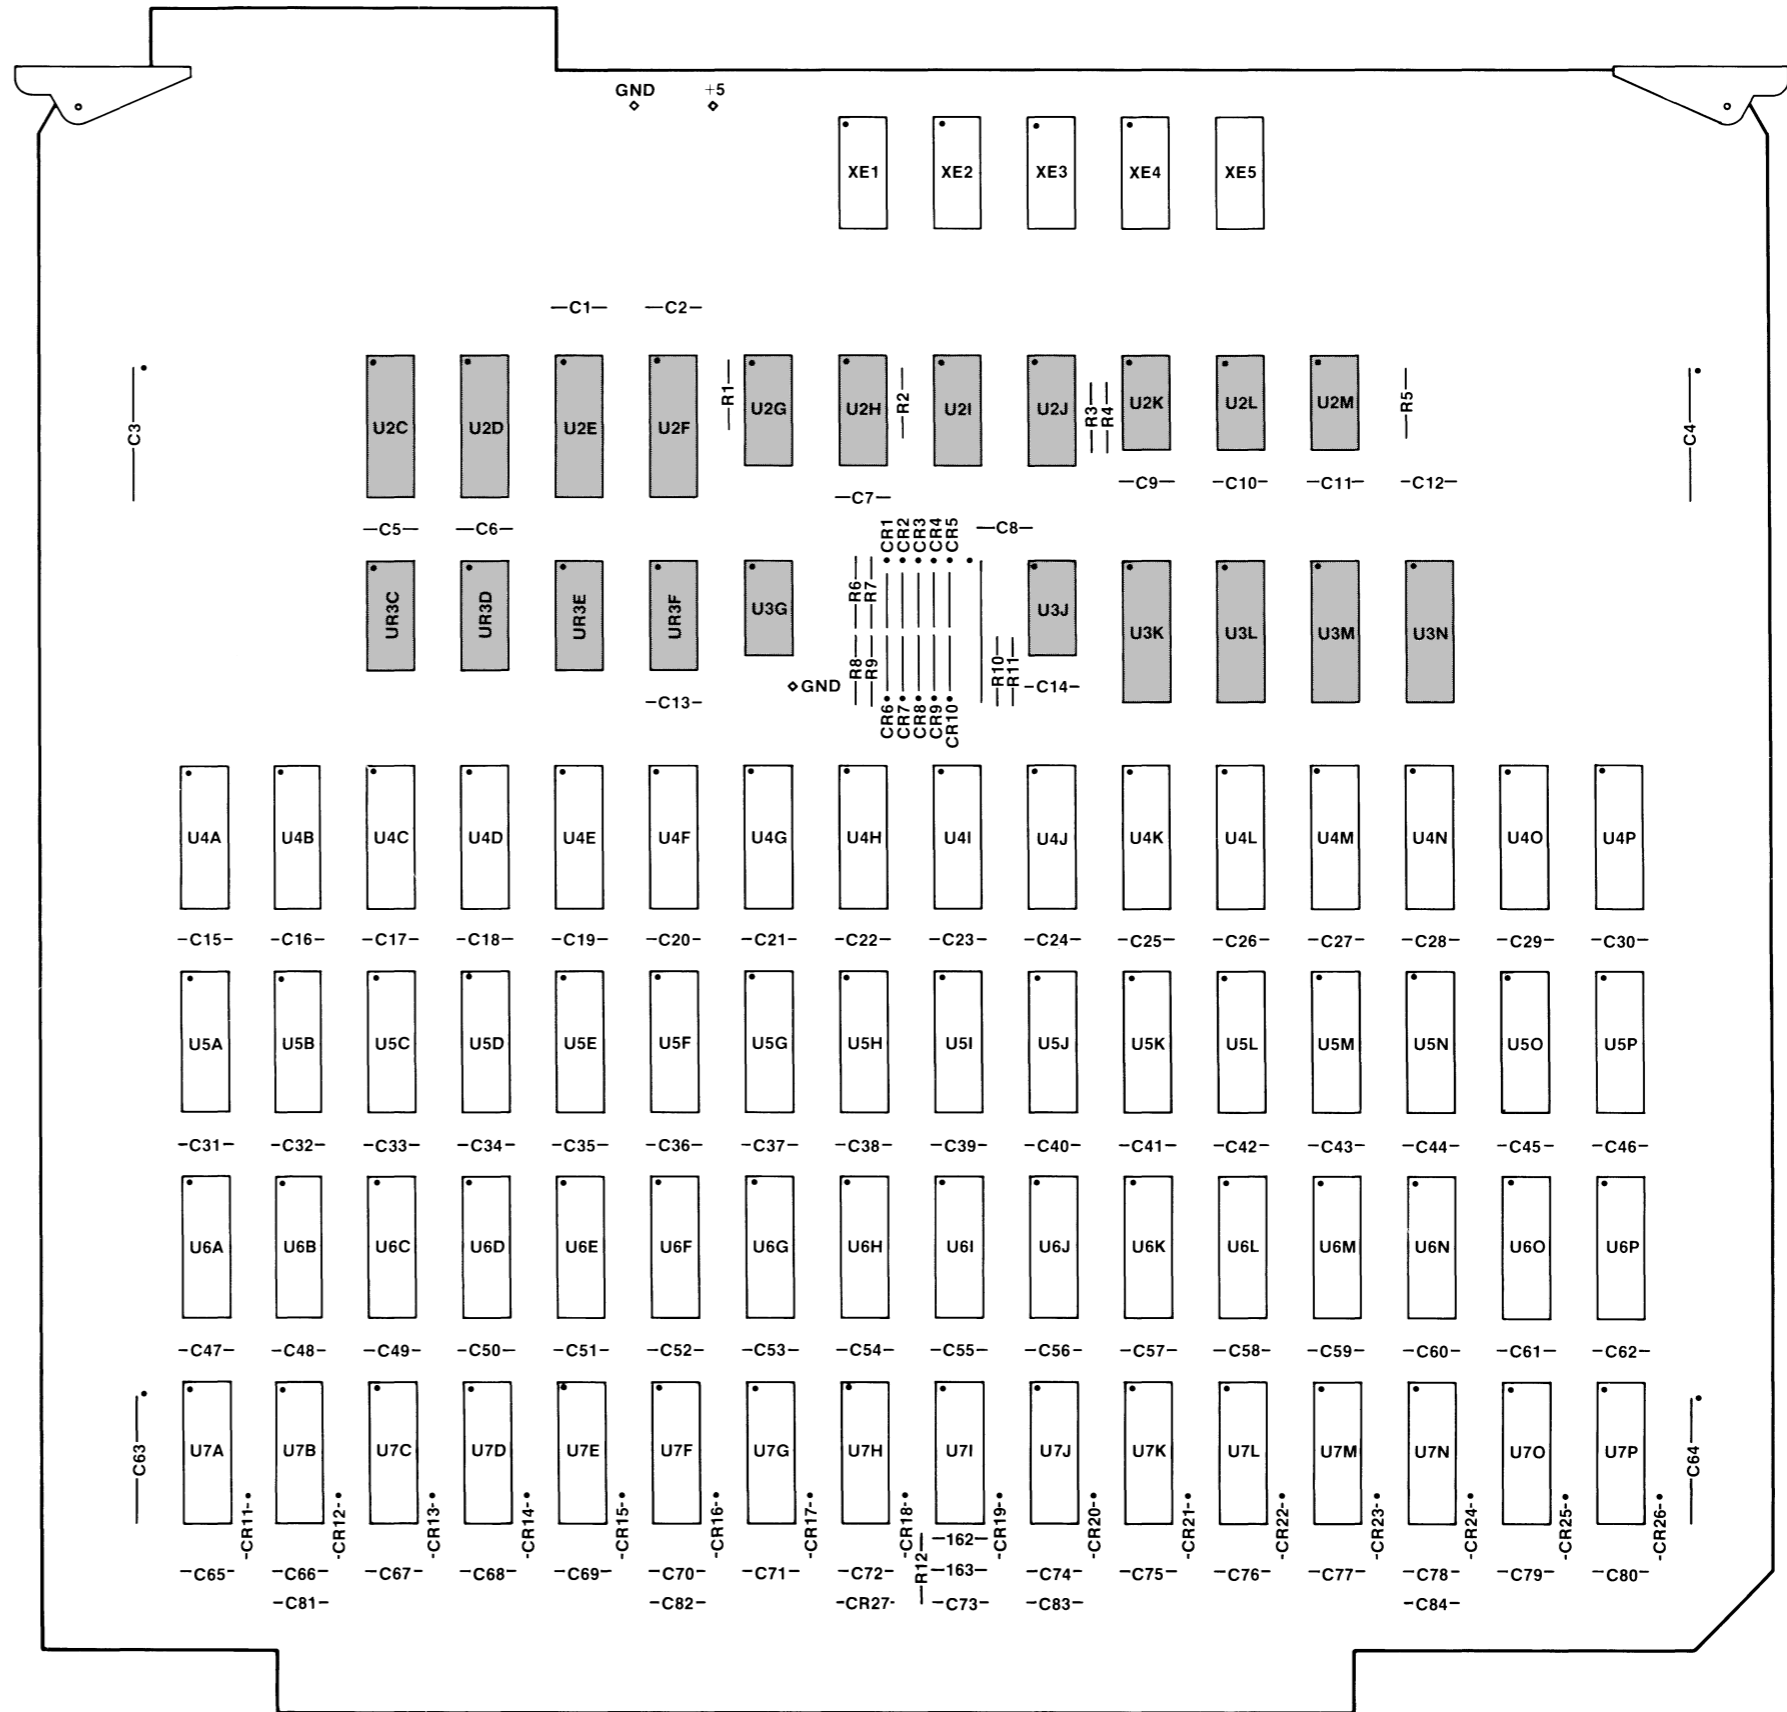


Figure 8-3. Model 64161A/162A/163A Component Locator
8-12

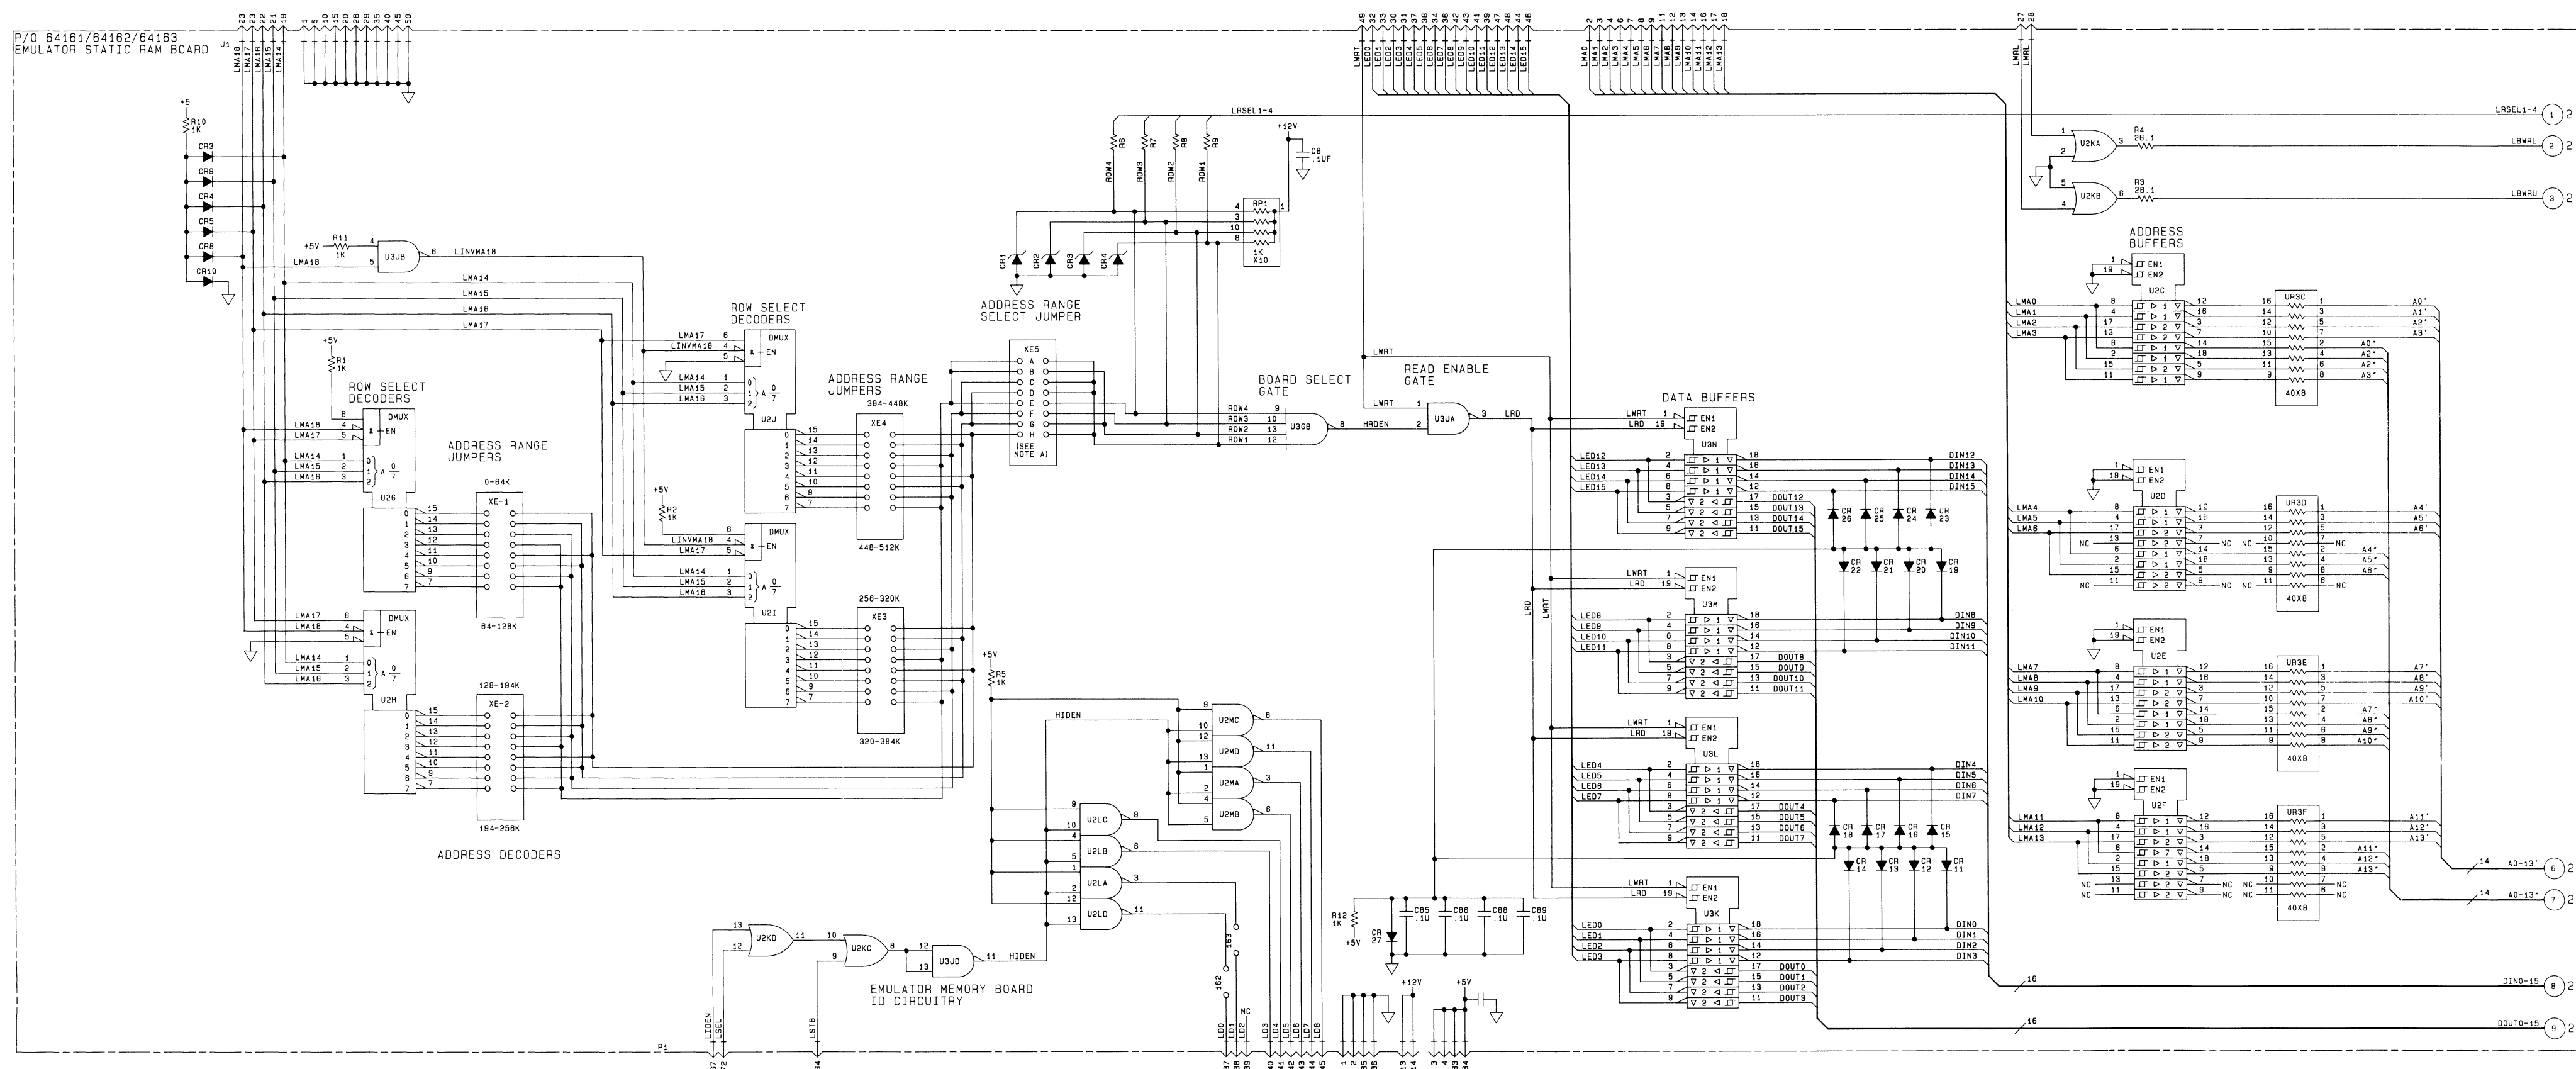

IC'S ON THIS SCHEMATIC

U2G-U2J	74F138	1820-2861
U2K	74LS03	1820-1198
U2L-U2M	74F32	1820-2690
U3G	74LS20	1820-1204
U3J	74F00	1820-2684
U2C-U2F	74S240	1820-1633
U3J	74F00	1820-2684
U3K-U3N	74S240	1820-1633

PARTS ON THIS SCHEMATIC

R1-R9, R11, RP1, CR1-CR9

- +5V 16 8 U2G-U2J
- +5V 14 7 U2K, U2L-U2M, U3G, U3J
- +5V 14 7 U3J
- +5V 20 10 U2C-U2F, U3K-U3N

NOTE A

A=row 1 48-64K
 B=row 2 48-64K
 C=row 3 32-48K
 D=row 1 16-32K
 E=row 4 48-64K
 F=row 3 32-48K
 G=row 2 16-32K
 H=row 1 0-16K

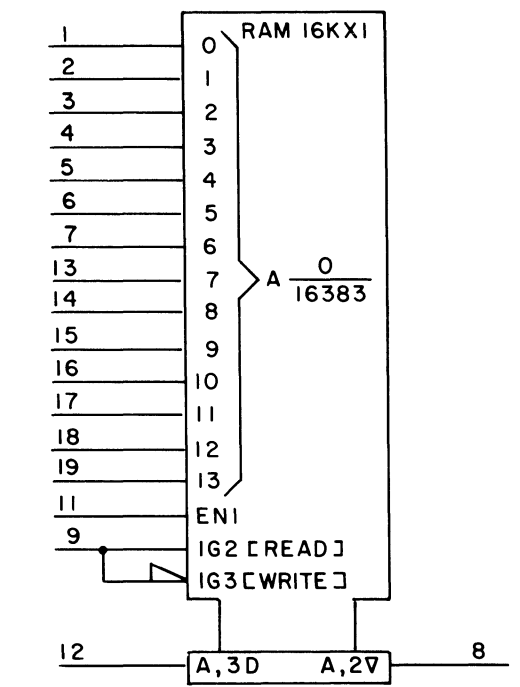


Figure 8-4. Service Sheet 1 8-13

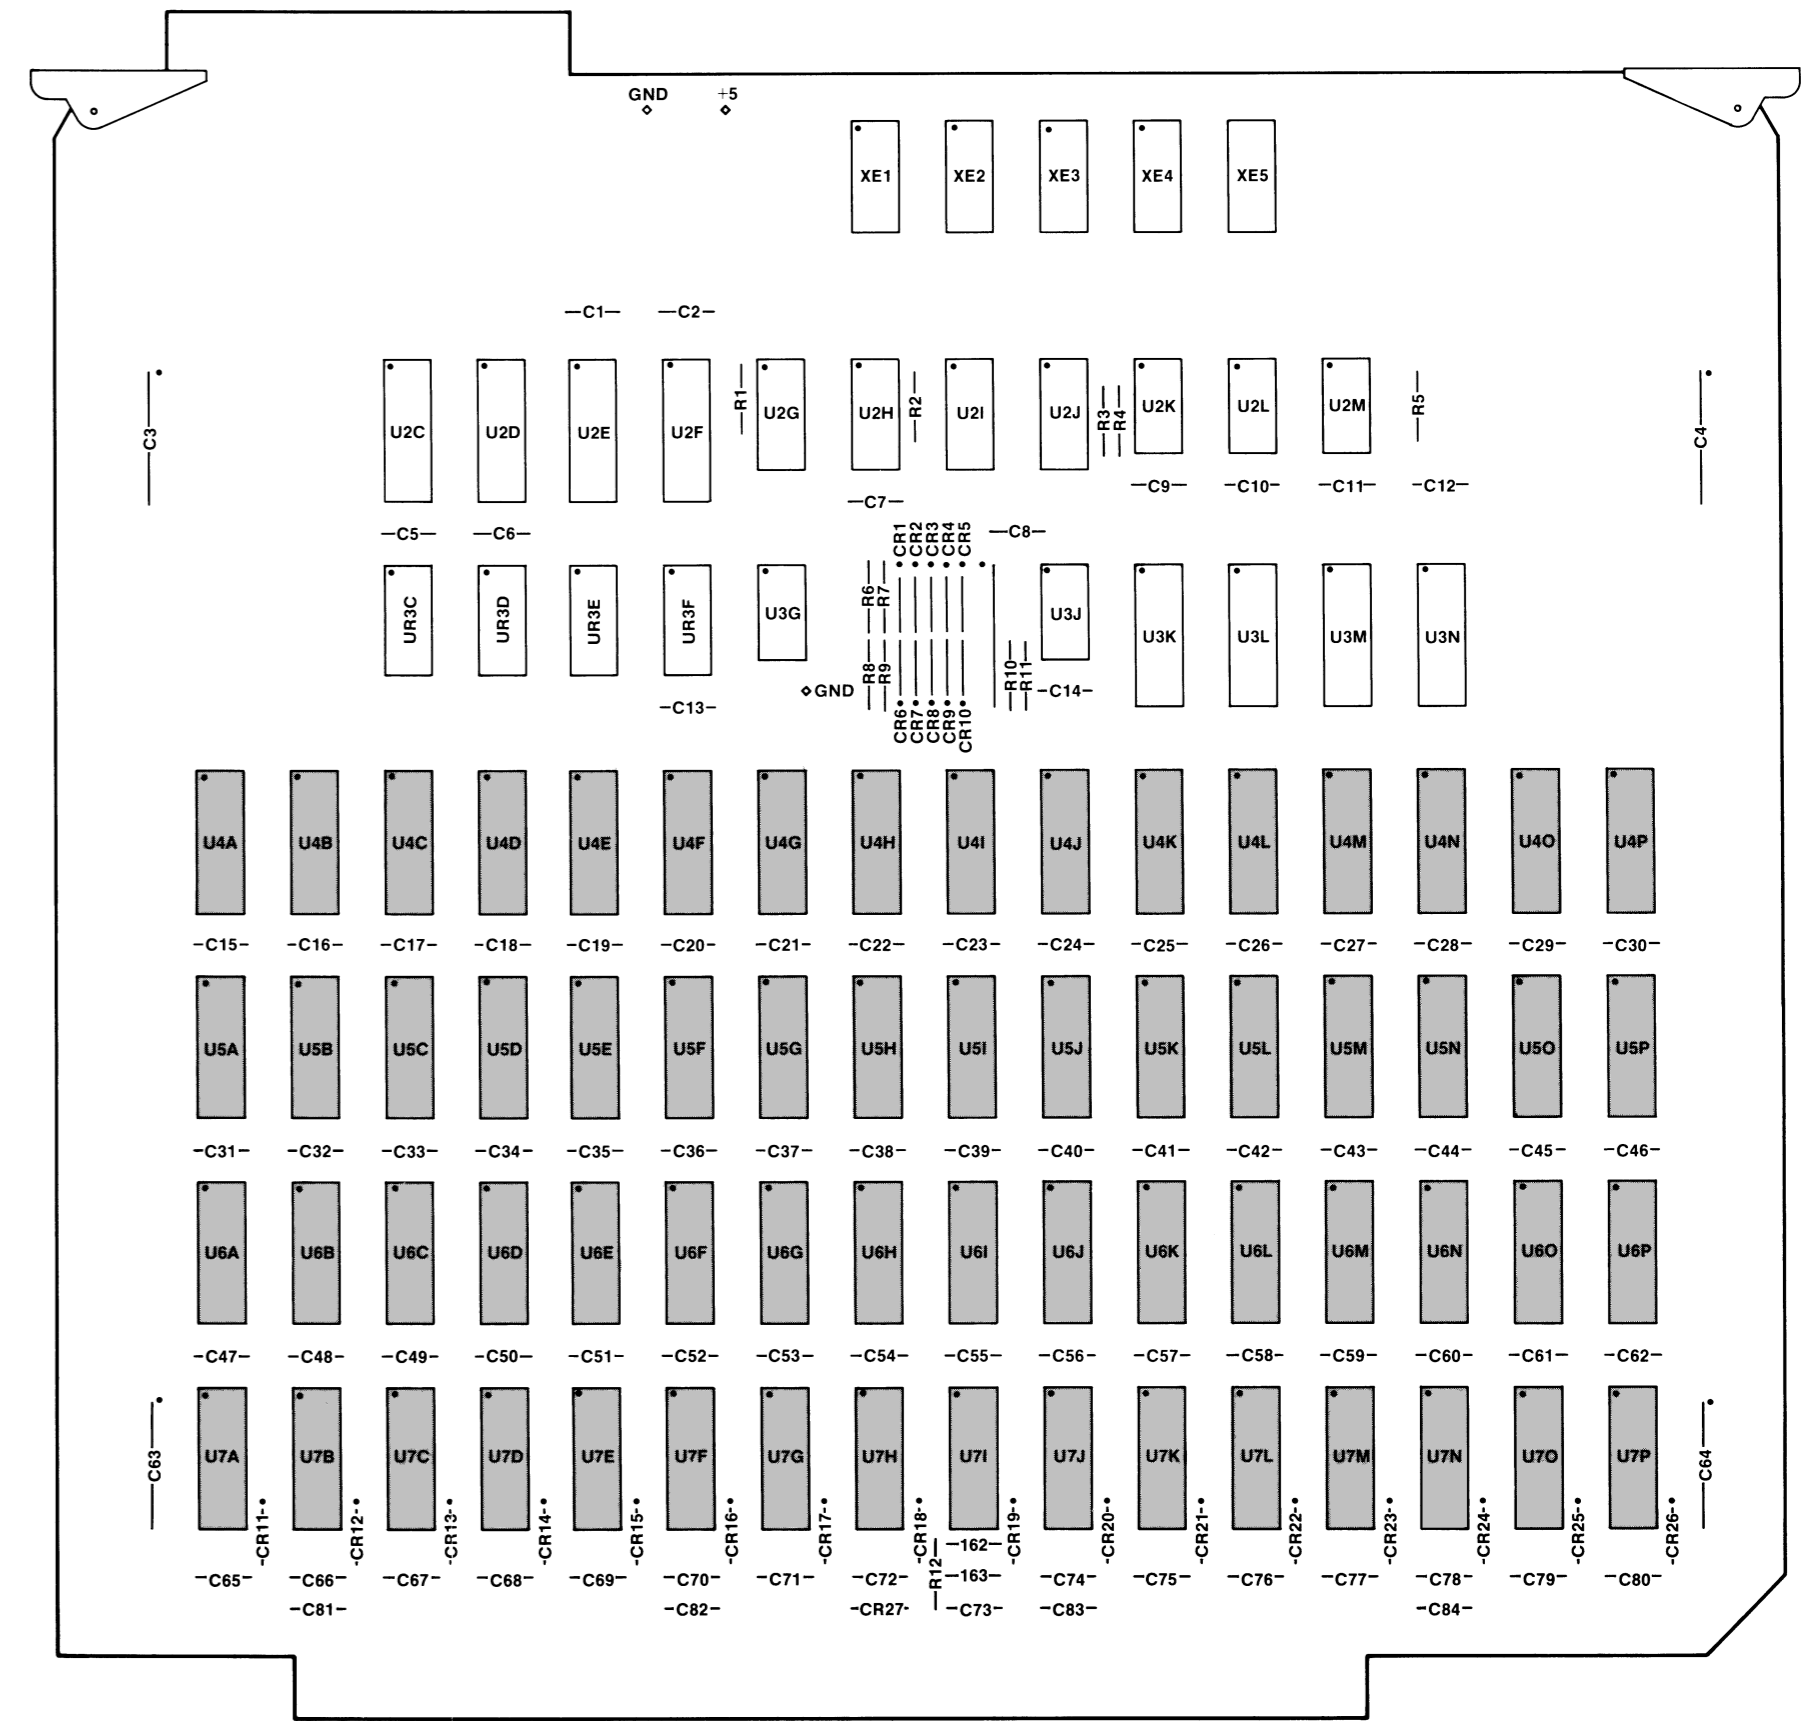


Figure 8-5. Model 64161A/162A/163A Component Locator
8-14

IC'S ON THIS SCHEMATIC

U4A-U4P	HM6167	1818-1969
U5A-U5P	HM6167	1818-1969
U6A-U6P	HM6167	1818-1969
U7A-U7P	HM6167	1818-1969

PARTS ON THIS SCHEMATIC

CR15-30, CR31-46, CR47-62, CR65-84

+5V 20 10 U4A-U4P, U5A-U5P, U6A-U6P, U7A-U7P

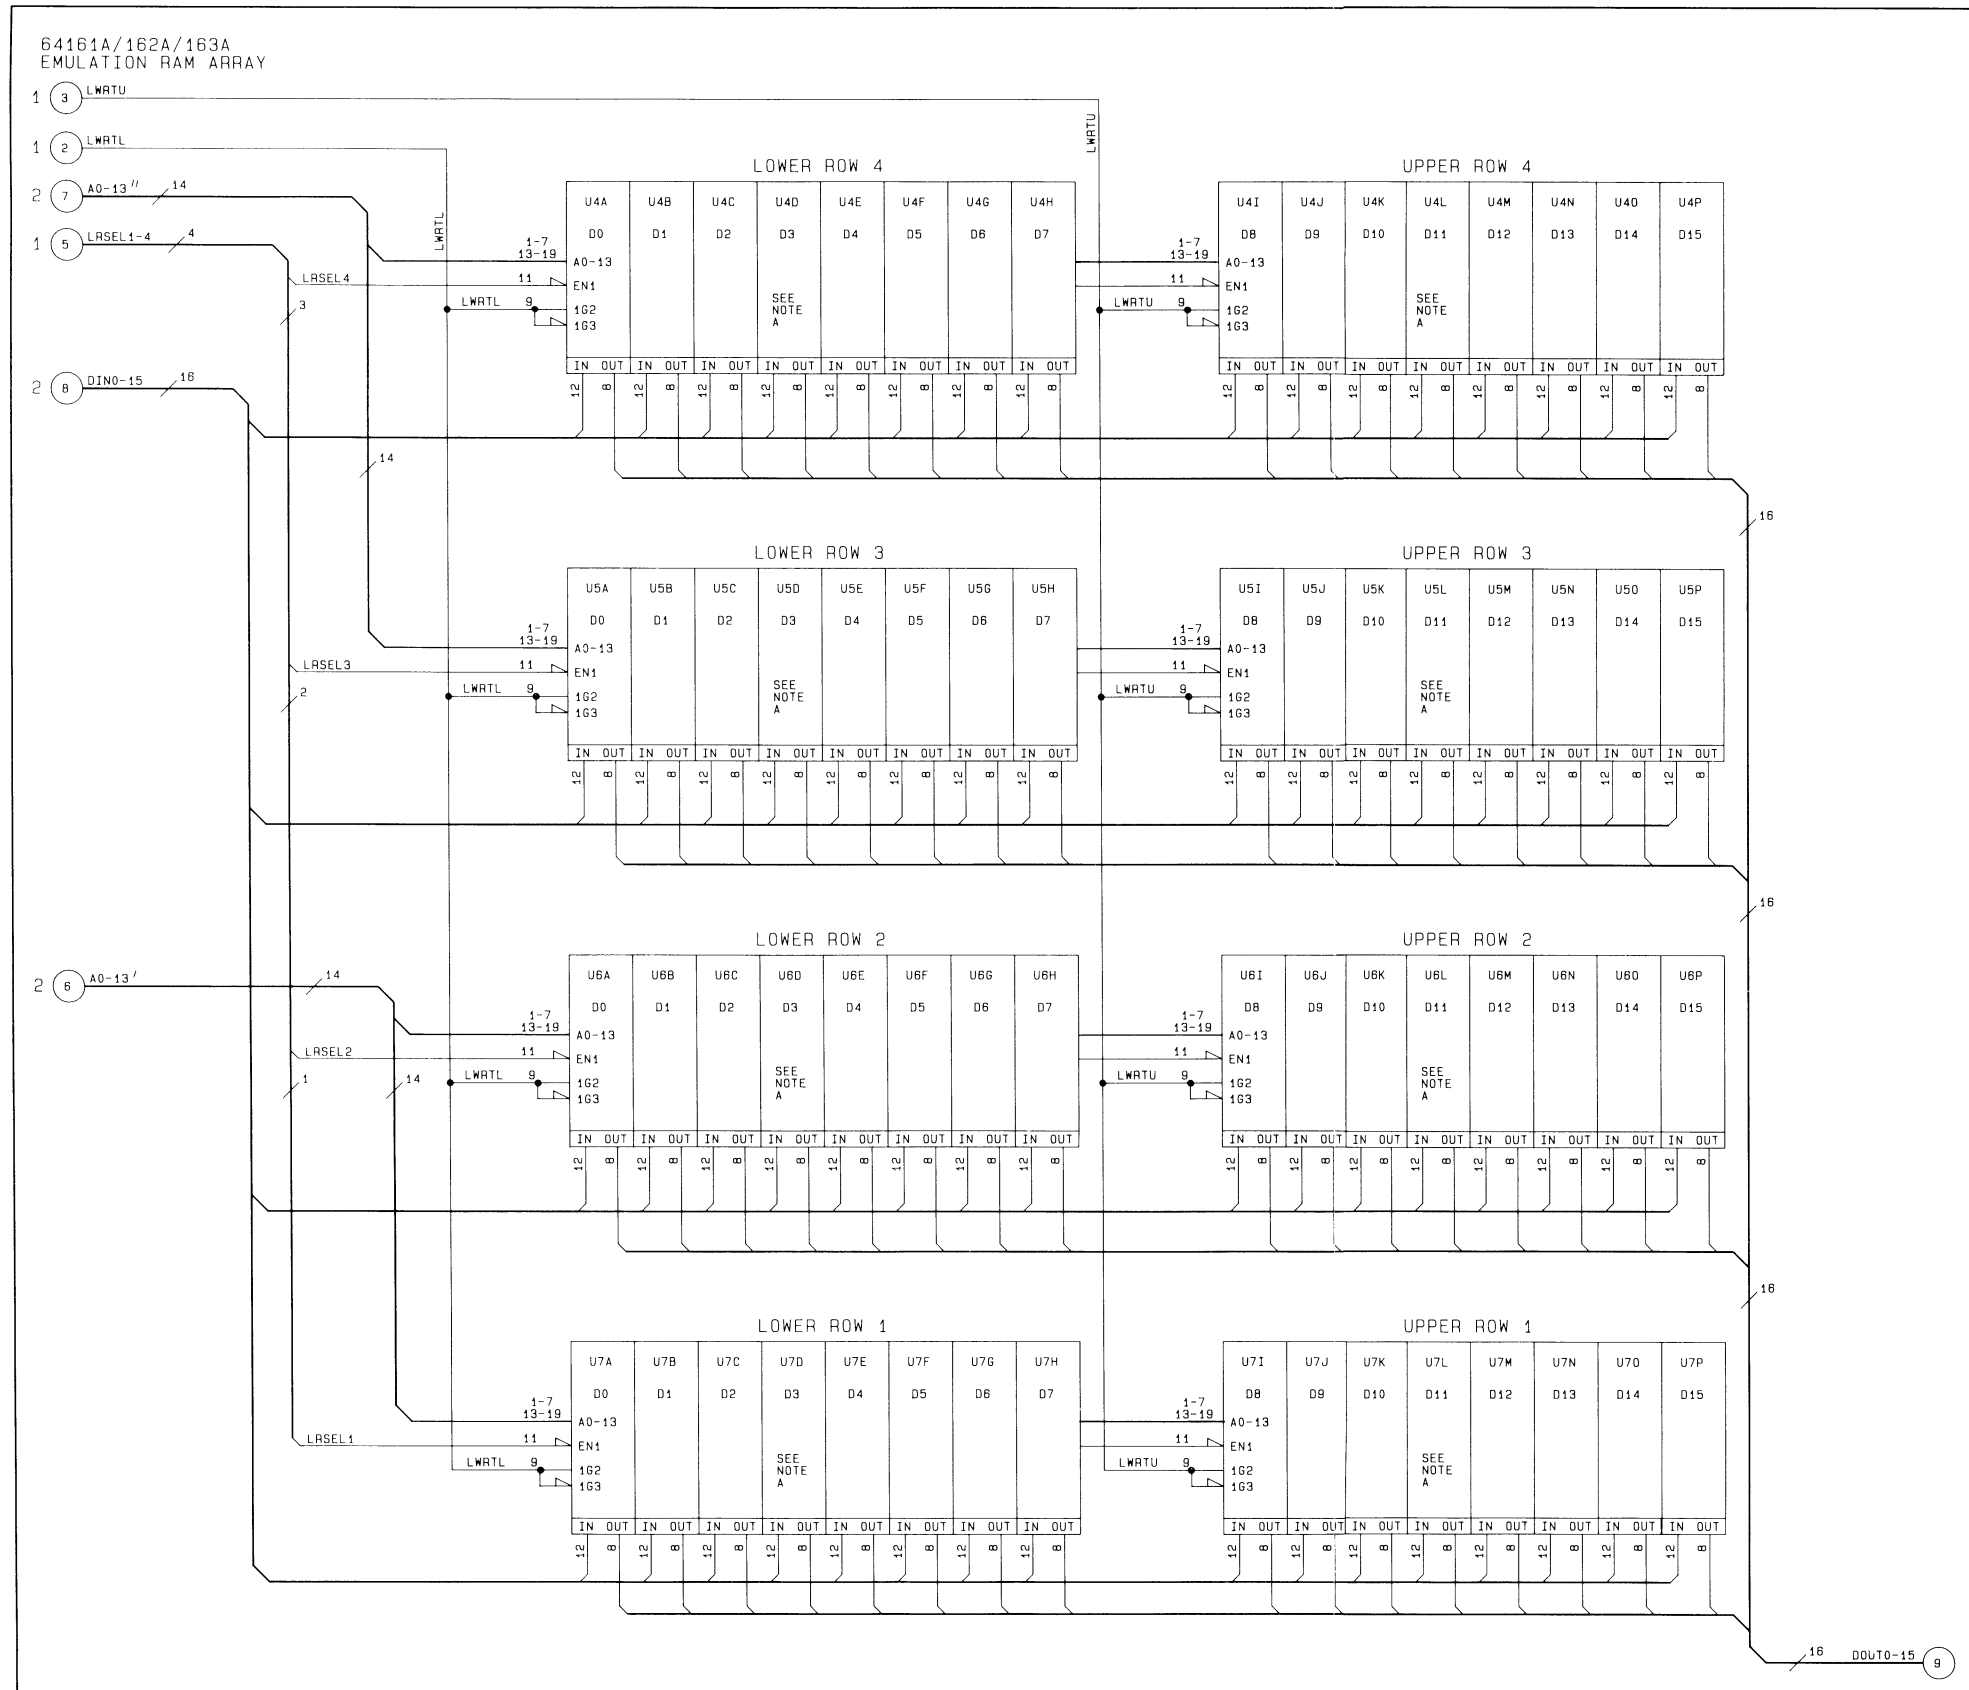


Figure 8-6. Service Sheet 2
8-15

SALES & SUPPORT OFFICES

Arranged alphabetically by country



Product Line Sales/Support Key

Key Product Line

- A Analytical
- CM Components
- C Computer Systems Sales only
- CH Computer Systems Hardware Sales and Services
- CS Computer Systems Software Sales and Services
- E Electronic Instruments & Measurement Systems
- M Medical Products
- MP Medical Products Primary SRO
- MS Medical Products Secondary SRO
- P Personal Computation Products
- * Sales only for specific product line
- ** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

ANGOLA

Telettra
Empresa Técnica de Equipamentos
R. Barbosa Rodrigues, 41-1 DT.
Caixa Postal 6487
LUANDA
Tel: 35515,35516
E,M,P

ARGENTINA

Hewlett-Packard Argentina S.A.
Avenida Santa Fe 2035
Martinez 1640 BUENOS AIRES
Tel: 798-5735, 792-1293
Telex: 17595 BIONAR
Cable: HEWPACKARG
A,E,CH,CS,P
Biotron S.A.C.I.M. e.l.
Av Paseo Colon 221, Piso 9
1399 BUENOS AIRES
Tel: 30-4846, 30-1851
Telex: 17595 BIONAR
M

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
153 Greenhill Road
PARKSIDE, S.A. 5063
Tel: 272-5911
Telex: 82536
Cable: HEWPARAD Adelaide
A*,CH,CM,E,MS,P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 30-4133
Telex: 42133
Cable: HEWPARD Brisbane
A,CH,CM,E,M,P

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
121 Wollongong Street
FYSHWICK, A.C.T. 2609
Tel: 80 4244
Telex: 62650
Cable: HEWPARD Canberra
CH,CM,E,P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
BLACKBURN, Victoria 3130
Tel: 890 6351
Telex: 31-024
Cable: HEWPARD Melbourne
A,CH,CM,CS,E,MS,P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
261 Stirling Highway
CLAREMONT, W.A. 6010
Tel: 383-2188
Telex: 93859
Cable: HEWPARD Perth
A,CH,CM,E,MS,P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Tel: 887-1611
Telex: 21561
Cable: HEWPARD Sydney
A,CH,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
Grottenhofstrasse 94
Verkaufsburo Graz
A-8052 GRAZ
Tel: 291-5-66
Telex: 32375
CH,E*

Hewlett-Packard Ges.m.b.h.
Liebigasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (0222) 23-65-11-0
Telex: 134425 HEPA A
A,CH,CM,CS,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
BAHRAIN
Tel: 255503-255950
Telex: 84419
P
Wael Pharmacy
P.O. Box 648
BAHRAIN
Tel: 256123
Telex: 8550 WAEI BN
E,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben br
A,CH,CM,CS,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 BARUERI SP
Tel: (011) 421.1311
Telex: (011) 33872 HPBR-BR
Cable: HEWPACK Sao Paulo
A,CH,CM,CS,E,M,P
Hewlett-Packard do Brasil I.e.C. Ltda.
Avenida Epitacio Pessoa, 4664
22471 RIO DE JANEIRO-RJ
Tel: (021) 286.0237
Telex: 02-121905 HPBR-BR
Cable: HEWPACK Rio de Janeiro
A,CH,CM,E,MS,P*

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
210, 7220 Fisher Street S.E.
CALGARY, Alberta T2H 2H8
Tel: (403) 253-2713
A,CH,CM,E*,MS,P*
Hewlett-Packard (Canada) Ltd.
11620A-168th Street
EDMONTON, Alberta T5M 3T9
Tel: (403) 452-3670
A,CH,CM,CS,E,MS,P*

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W7
Tel: (604) 270-2277
Telex: 110-922-5059
A,CH,CM,CS,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
380-550 Century Street
WINNIPEG, Manitoba R3H 0Y1
Tel: (204) 786-6701
A,CH,CM,E,MS,P*

New Brunswick

Hewlett-Packard (Canada) Ltd.
37 Sheadiac Road
MONCTON, New Brunswick E2B 2V0
Tel: (506) 855-2841
CH**

Nova Scotia

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
900 Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 469-7820
CH,CM,CS,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A,CH,CM,E*,MS,P*
Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
A,CH,CM,CS,E*,MS,P*
Hewlett-Packard (Canada) Ltd.
220 Yorkland Blvd., Unit #11
WILLOWDALE, Ontario M2J 1R5
Tel: (416) 499-9333
CH

Quebec

Hewlett-Packard (Canada) Ltd.
17500 South Service Road
Trans-Canada Highway
KIRKLAND, Quebec H9J 2M5
Tel: (514) 697-4232
A,CH,CM,CS,E,MP,P*
Hewlett-Packard (Canada) Ltd.
Les Galeries du Vallon
2323 Du Versant Nord
STE. FOY, Quebec G1N 4C2
Tel: (418) 687-4570
CH

CHILE

Jorge Calcagni y Cia. Ltda.
Arturo Buhrie 065
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: Public Booth 440001
A,CM,E,M
Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: (02) 22 55 044
Telex: 240-565 OLYMP CL
Cable: Olympiachile Santiagochile
CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Rep. Office
P.O. Box 418
1A Lane 2, Luchang St.
Beiwai Rd., Xuanwu District
BEIJING
Tel: 33-1947, 33-7426
Telex: 22601 CTSHP CN
Cable: 1920
A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS

Telexera Ltd.
P.O. Box 4809
14C Stassinou Avenue
NICOSIA
Tel: 62698
Telex: 2894 LEVIDO CY
E,M,P

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 BIRKEROD
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,CH,CM,CS,E,MS,P
Hewlett-Packard A/S
Rølhedsvej 32
DK-8240 RISSKOV
Tel: (06) 17-60-00
Telex: 37409 hpas dk
CH,E

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA)
P

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
CM,E,P
Hospitalar S.A.
Robles 625
Casilla 3590
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTEL ED
Cable: HOSPITALAR-Quito
M

EGYPT

International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
CAIRO
Tel: 23829, 21641
Telex: IEA UN 93830
CH,CS,E,M
Informatic For Systems
22 Talaat Harb Street
CAIRO
Tel: 759006
Telex: 93938 FRANK UN
CH,CS,P
Egyptian International Office
for Foreign Trade
P.O. Box 2558
CAIRO
Tel: 650021
Telex: 93337 EGPOR
P

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1216
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 EPISA
A,CH,CM,CS,E,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

FINLAND

Hewlett-Packard Oy
Revontulentie 7
SF-02100 **ESPOO** 10
Tel: 00358-0-4550211
Telex: 9100
A,CH,CM,CS,E,MS,P

Hewlett-Packard Oy
Aatoksenkatu 10-C
SF-40720-72 **JYVASKYLA**
Tel: (941) 216318
CH

Hewlett-Packard Oy
Kainuntie 1-C
SF-90140-14 **OULU**
Tel: (981) 338785
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 Les Milles Cedex

AIX-EN-PROVENCE
Tel: 16 (42) 59-41-02
Telex: 410770F
A,CH,E,MS,P*

Hewlett-Packard France
64, rue Marchand Saillant
F-61000**ALENCON**
Tel: 16 (33) 29 04 42

Hewlett-Packard France
Boite Postale 503
F-25026 **BESANCON**
28 rue de la Republique
F-25000 **BESANCON**
Tel: 16 (81) 83-16-22
CH,M

Hewlett-Packard France
13, Place Napoleon III
F-29000 **BREST**
Tel: 16 (98) 03-38-35

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
F-69130 **ECULLY** Cedex
Tel: 16 (78) 833-81-25
Telex: 310617F
A,CH,CS,E,MP

Hewlett-Packard France
Tour Lorraine
Boulevard de France
F-91035 **EVRY** Cedex
Tel: 16 6 077-96-60
Telex: 692315F
E

Hewlett-Packard France
5, avenue Raymond Chanas
F-38320 **EYBENS**
Tel: 16 (76) 25-81-41
Telex: 980124 HP GRENOb EYBE
CH

Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 300
F-93153 **LE BLANC MESNIL**
Tel: 16 (1) 865-44-52
Telex: 211032F
CH,CS,E,MS

Hewlett-Packard France
Parc d'Activités Cadere
Quartier Jean Mermoz
Avenue du Président JF Kennedy
F-33700 **MERIGNAC**
Tel: 16 (56) 34-00-84
Telex: 550105F
CH,E,MS

Hewlett-Packard France
Immeuble "Les 3 B"
Nouveau Chemin de la Garde
ZAC de Bois Briand
F-44085 **NANTES** Cedex
Tel: 16 (40) 50-32-22
CH**

Hewlett-Packard France
125, rue du Faubourg Bannier
F-45000 **ORLEANS**
Tel: 16 (38) 68 01 63

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex **ORSAY**
Tel: (6) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P

Hewlett-Packard France
Paris Porte-Maillot
15, Avenue de L'Amiral Bruix
F-75782 **PARIS CEDEX** 16
Tel: 16 (1) 502-12-20
Telex: 613663F
CH,MS,P

Hewlett-Packard France
124, Boulevard Tourasse
F-64000 **PAU**
Tel: 16 (59) 80 38 02

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 **RENNES**
Tel: 16 (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*

Hewlett-Packard France
98 Avenue de Bretagne
F-76100 **ROUEN**
Tel: 16 (35) 63-57-66
CH**,CS

Hewlett-Packard France
Boite Postale 56
F-67033 **STRASBOURG** Cedex
4 Rue Thomas Mann
F-67200 **STRASBOURG** Cedex
Tel: 16 (88) 28-56-46
Telex: 890141F
CH,E,MS,P*

Hewlett-Packard France
Le Péripole
3, Chemin du Pigeonnier de la
Cépière
F-31083 **TOULOUSE** Cedex
Tel: 16 (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*

Hewlett-Packard France
9, rue Baudin
F-26000 **VALENCE**
Tel: 16 (75) 42 76 16

Hewlett-Packard France
Garolor
ZAC de Bois Briand
F-57640 **VIGY**
Tel: 16 (8) 771 20 22
CH

Hewlett-Packard France
Immeuble Péricentre
F-59658 **VILLENEUVE D'ASCQ** Cedex
Tel: 16 (20) 91-41-25
Telex: 160124F
CH,E,MS,P*

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 **BERLIN** 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbln d
A,CH,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Herrenberger Strasse 110
D-7030 **BÖBLINGEN**
Tel: (7031) 667-750
Telex: bbn or
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Leutze-Strasse 1
D-4000 **DUSSELDORF**
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 **FRANKFURT** 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpffm d
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
D-2000 **HAMBURG** 60
Tel: (040) 63804-1
Telex: 021 63 032 hphd d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 **HANNOVER** 91
Tel: (0511) 5706-0
Telex: 092 3259
A,CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
D-6800 **MANNHEIM**
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 **NEU ULM**
Tel: 0731-70241
Telex: 0712816 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Neumeyerstrasse 90
D-8500 **NÜRNBERG**
Tel: (0911) 52 20 83-87
Telex: 0623 860
CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
D-8028 **TAUFKIRCHEN**
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

See United Kingdom

GREECE

Kostas Karayannis S.A.
8 Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,CH,CM,CS,E,M,P

PLAISIO S.A.
G. Gerardos
24 Stourmara Street
ATHENS
Tel: 36-11-160
Telex: 221871
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 4192 TELTRO GU
A,CH,CM,CS,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG
E,CH,CS,P

CET Ltd.
1402 Tung Way Mansion
199-203 Hennessy Rd.
Wanchia, **HONG KONG**
Tel: 5-729376
Telex: 85148 CET HX

CM
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Eliding Trading Company Inc.
Hafnarvölli-Tryggvagotu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs
and maintenance service is done
through Computer Maintenance
Corp.

Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660

Telex: 0845-430
Cable: BLUESTAR
A,CH**,CM,CS*,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
41/42 Vir Savarkar Marg
Prabhadevi

BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTBLUE
A,CH**,CM,CS*,E,M

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, **BORODA**, 390 005
Tel: 65235
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH**,CM,CS*,E,M

Blue Star Ltd.
15/16:C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

Computer Maintenance Corporation
Ltd.
115, Sarojini Devi Road
SECUNDERABAD 500 003
Tel: 310-184, 345-774
Telex: 031-2960
CH**

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/JKT.
Jl. Abdul Muis 62
JAKARTA
Tel: 373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA
P

BERCA Indonesia P.T.
P.O.Box 2497/Jkt Antara Bldg.,
17th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-344-181
Telex: BERSAL IA
A,CS,E,M

BERCA Indonesia P.T.
P.O. Box 174/SBY.
Jl. Kutei No. 11
SURABAYA
Tel: 68172
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPAIRAQ IK
CH,CS

SALES & SUPPORT OFFICES

Arranged alphabetically by country

3



IRELAND

Hewlett-Packard Ireland Ltd.
82/83 Lower Leeson Street
DUBLIN 2
Tel: (1) 60 88 00
Telex: 30439
A,CH,CM,CS,E,M,P

Cardiac Services Ltd.
Kimore Road
Artane
DUBLIN 5
Tel: (01) 35 1820
Telex: 30439
M

ISRAEL

Eldan Electronic Instrument Ltd.
P.O.Box 1270
JERUSALEM 91000
16, Ohaliav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL
A

Electronics Engineering Division
Motorola Israel Ltd.
16 Kremenetski Street
P.O. Box 25016
TEL-AVIV 67899
Tel: 3-338973
Telex: 33569 Motil IL
Cable: BASTEL Tel-Aviv
CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A
Traversa 99C
Via Giulio Petroni, 19
I-70124 **BARI**
Tel: (080) 41-07-44
M

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/111
I-40132 **BOLOGNA**
Tel: (051) 402394
Telex: 511630
CH,E,MS

Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95126 **CATANIA**
Tel: (095) 37-10-87
Telex: 970291
C,P

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 **CERNUSCO SUL NAVIGLIO**
Tel: (2) 903691
Telex: 334632
A,CH,CM,CS,E,MP,P

Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco a
Capodimonte, 62/A
I-80131 **NAPLES**
Tel: (081) 7413544
Telex: 710698
A,CH,E

Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 **GENOVA PEGLI**
Tel: (010) 68-37-07
Telex: 215238
E,C

Hewlett-Packard Italiana S.p.A.
Via Turazza 14
I-35100 **PADOVA**
Tel: (049) 664888
Telex: 430315
A,CH,E,MS

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 **ROMA**
Tel: (06) 54831
Telex: 610514
A,CH,CM,CS,E,MS,P*

Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 184
I-10149 **TORINO**
Tel: (011) 74 4044
Telex: 221079
CH,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
000 **ATSUGI**, Kanagawa, 243
Tel: (0462) 28-0451
CM,C*,E
Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Daiichi Seimei Bldg.
4-7, Hanabata-cho
KUMAMOTO, 860
Tel: (0963) 54-7311
CH,E

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614, Higashi-Shiokoji-cho
Karasuma-Nishiiru
Shiokoji-dori, Shimogyo-ku
KYOTO, 600
Tel: 075-343-0921
CH,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg
4-73, Sannomaru, 1 Chome
MITO, Ibaragi 310
Tel: (0292) 25-7470
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei 14-9 Bldg.
Meieki-Minami, 2 Chome
Nakamura-ku
NAGOYA, 450
Tel: (052) 571-5171
CH,CM,CS,E,MS

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
27-15, Yabe, 1 Chome
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.
Daiichi Seimei Bldg.
7-1, Nishi Shinjuku, 2 Chome
Shinjuku-ku, **TOKYO** 160
Tel: 03-348-4611-5
CH,E

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku **TOKYO** 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
Daiichi Asano Building
2-8, Odori, 5 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 25-7155
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
YOKOHAMA 221
Tel: (045) 312-1252
CH,CM,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
CH,E,M,P

KENYA

ADCOM Ltd., Inc., Kenya
P.O.Box 30070
NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Electronics Computer
Division
76-561 Yeoksam-Dong
Kwangnam-Ku
C.P.O. Box 2775
SEOUL
Tel: 555-7555, 555-5447
Telex: K27364 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830 Safat
KUWAIT
Tel: 42-4910, 41-1726
Telex: 22481 Areeg K1
CH,E,M
Photo & Cine Equipment
P.O. Box 270 Safat
KUWAIT
Tel: 42-2846, 42-3801
Telex: 22247 Matin K1
P

LEBANON

G.M. Dolmadjian
Achrafieh
P.O. Box 165.167
BEIRUT
Tel: 290293
MP**

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan British
American
Jalan Semantan, Damansara Heights
KUALA LUMPUR 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*
Protel Engineering
P.O.Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROTEL
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd.
Notabile Rd.
MRIEHEL
Tel: 447 47, 455 66
Telex: Media MW 649
P

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
MEXICO D.F. 16020
Tel: 676-4600
Telex: 17-74-507 HEWPACK MEX
A,CH,CS,E,MS,P
Hewlett-Packard Mexicana, S.A.
de C.V.
Ave. Colonia del Valle #409
Col. del Valle
Municipio de Garza Garcia
MONTERREY, N.L.
Tel: 78 42 41
Telex: 038 410
CH

ECISA

José Vasconcelos No. 218
Col. Condesa Deleg. Cuauhtémoc
MEXICO D.F. 06140
Tel: 553-1206
Telex: 17-72755 ECE ME
M

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E
Gerep
2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KK AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 47-20-21
Telex: 13 216 HEPAC NL
A,CH,CM,CS,E,MP,P
Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK CAPELLE, A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE, A/D IJSSEL
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A,CH,CS,E

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
169 Manukau Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPACK Auckland
CH,CM,E,P*
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, **WELLINGTON 3**
P.O. Box 9443
Courtenay Place, **WELLINGTON 3**
Tel: 877-199
Cable: HEWPACK Wellington
CH,CM,E,P

Northrop Instruments & Systems
Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems
Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-928
Telex: 4203
A,M

Northrop Instruments & Systems
Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 **FYLLINGSDALEN** (Bergen)
Tel: (05) 16-55-40
Telex: 16621 hpnas n
CH,CS,E,MS
Hewlett-Packard Norge A/S
Österdalen 18
P.O. Box 34
N-1345 **ÖSTERÅS**
Tel: (02) 17-11-80
Telex: 16621 hpnas n
A,CH,CM,CS,E,M,P

OMAN

Khimjil Ramdas
P.O. Box 19
MUSCAT
Tel: 722225, 745601
Telex: 3289 BROKER MB MUSCAT
P
Suhail & Saud Bahwan
P.O.Box 169
MUSCAT
Tel: 734 201-3
Telex: 3274 BAHWAN MB

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 26875
Cable: FEMUS Rawalpindi
A,E,M

Mushko & Company Ltd.
Osmoan Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P*

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 64-2700
Telex: 3483 ELECTRON PG
A,CM,E,M,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

PERU

Cia Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
CM,E,M,P

PHILIPPINES

The Online Advanced Systems
Corporation
Rico House, Amorsolo Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,CH,CS,E,M
Electronic Specialists and
Proponents Inc.
690-B Epifanio de los Santos
Avenue
Cubao, QUEZON CITY
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY BOOTH
P

PORTUGAL

Mundinter
Intercambio Mundial de Comércio
S.A.R.L.
P.O. Box 2761
Avenida Antonio Augusto de Aguiar
138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M
Soquimica
Av. da Liberdade, 220-2
1298 LISBOA Codex
Tel: 56 21 81/2/3
Telex: 13316 SABASA
P
Telectra-Empresa Técnica de
Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P

PUERTO RICO

Hewlett-Packard Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00628
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico
Tel: (809) 762-7255
A,CH,CS

QATAR

Computerbia
P.O. Box 2750
DOHA
Tel: 883555
Telex: 4806 CHPARB
P
Eastern Technical Services
P.O. Box 4747
DOHA
Tel: 329 993
Telex: 4156 EASTEC DH

Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 22170, 23539
Telex: 4439 NASSER DH
M

SAUDI ARABIA

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 281
Thuobah
AL-KHOBAR
Tel: 864-46 78
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
CH,CS,E,M,P

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 38 48
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
CH,CS,E,M,P

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 2728
RIYADH
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYD SJ
CH,CS,E,M,P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
P.O. Box 58 Alexandra Post Office
SINGAPORE, 9115
6th Floor, Inchcape House
450-452 Alexandra Road
SINGAPORE 0511
Tel: 631788
Telex: HPSGSO RS 34209
Cable: HEWPACK, Singapore
A,CH,CS,E,MS,P
Dynamar International Ltd.
Unit 05-11 Block 6
Kohlam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS 26283
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.)
Ltd.
P.O. Box 120
Howard Place CAPE PROVINCE 7450
Pine Park Center, Forest Drive,
Pinelands
CAPE PROVINCE 7405
Tel: 53-7954
Telex: 57-20006
A,CH,CM,E,MS,P
Hewlett-Packard So Africa (Pty.)
Ltd.
P.O. Box 37099
92 Overport Drive
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
Telex: 6-22954
CH,CM

Hewlett-Packard So Africa (Pty.)
Ltd.
6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6001
Tel: 041-302148
CH

Hewlett-Packard So Africa (Pty.)
Ltd. P.O. Box 33345
Glenstantia 0010 TRANSVAAL
1st Floor East
Constantia Park Ridge Shopping
Centre
Constantia Park
PRETORIA
Tel: 982043
Telex: 32163
CH,E

Hewlett-Packard So Africa (Pty.)
Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.
Calle Entenza, 321
E-BARCELONA 29
Tel: 322.24.51, 321.73.54
Telex: 52603 hpbee
A,CH,CS,E,MS,P

Hewlett-Packard Española S.A.
Calle San Vicente S/No
Edificio Albia II
E-BILBAO 1
Tel: 423.83.06
A,CH,E,MS

Hewlett-Packard Española S.A.
Ctra. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
CH,CS,M

Hewlett-Packard Española S.A.
Avda. S. Francisco Javier, S/no
Planta 10. Edificio Sevilla 2,
E-SEVILLA 5
Tel: 64.44.54
Telex: 72933
A,CS,MS,P

Hewlett-Packard Española S.A.
Calle Ramon Gordillo, 1 (Entlo.3)
E-VALENCIA 10
Tel: 361-1354
CH,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnvagenvagen 14K
S-22226 LUND
Tel: (046) 13-69-79
Telex: (854) 17886 (via Spånga
office)
CH
Hewlett-Packard Sverige AB
Vastra Vintergatan 9
S-70344 ÖREBRO
Tel: (19) 10-48-80
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
A,CH,CM,CS,E,MS,P
Hewlett-Packard Sverige AB
Frötällsgatan 30
S-42132 VÄSTRA-FRÖLUNDA
Tel: (031) 49-09-50
Telex: (854) 17886 (via Spånga
office)
CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (61) 33-59-20
A
Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 1
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
CH,CM,CS

Hewlett-Packard (Schweiz) AG
Allmend 2
CH-8967 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 11216 ITIKAL SY
Cable: ELECTROBOR DAMASCUS
E
Middle East Electronics
Place Azmé
P.O. Box 2308
DAMASCUS
Tel: 334592
Telex: 11304 SATACO SY
M,P

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Office
2/F 68-2, Chung Cheng 3rd Road
KAOHSIUNG
Tel: 241-2318, 261-3253
CH,CS,E

Hewlett-Packard Far East Ltd.
Taiwan Branch
5th Floor
205 Tun Hwa North Road
TAIPEI
Tel: (02) 712-0404
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P
Ing Lih Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3948191
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,CH,CS,E,M
Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-BEQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
50/A Jerningham Avenue
P.O. Box 732
PORT-OF-SPAIN
Tel: 62-44213, 62-44214
Telex: 235,272 HUGCO WG
CM,E,M,P

TUNISIA

Tunisie Electronique
31 Avenue de la Liberté
TUNIS
Tel: 280-144
E,P
Corema
1 ter. Av. de Carthage
TUNIS
Tel: 253-821
Telex: 12319 CABAM TN
M

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere, ANKARA
Tel: 275800
Telex: 42155 TKNM TR
E
E.M.A.
Medina Eldem Sokak No.41/6
Yukseki Caddesi
ANKARA
Tel: 175 622
M

UNITED ARAB EMIRATES

Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: 354121, 354123
Telex: 68136 Emitac Sh
CH,CS,E,M,P

UNITED KINGDOM

GREAT BRITAIN
Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: (061) 928-6422
Telex: 668068
A,CH,CS,E,M
Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton
BRISTOL BS8 2BN, Avon
Tel: (027) 38606
Telex: 444302
CH,M,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

5



GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Fourier House
257-263 High Street
LONDON COLNEY
Herts., AL2 1HA, St. Albans
Tel: (0727) 24400
Telex: 1-8952716
CH,CS,E

Hewlett-Packard Ltd.
Quadrangle
106-118 Station Road
REDHILL, Surrey
Tel: (0737) 68655
Telex: 947234
CH,CS,E

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
SHIRLEY, Solihull
West Midlands B90 4BL
Tel: (021) 745 8800
Telex: 339105
CH

Hewlett-Packard Ltd.
West End House 41
High Street, West End
SOUTHAMPTON
Hampshire SO3 3DQ
Tel: (703) 886767
Telex: 477138
CH

Hewlett-Packard Ltd.
King Street Lane
WINNERSH, Wokingham
Berkshire RG11 5AR
Tel: (0734) 784774
Telex: 847178
A,CH,E,M

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, 3RG11 3LL
Tel: 3446 3100
Telex: 84-88-05
CH,CS,E

NORTHERN IRELAND

Cardiac Services Company
95A Finaghy Road South
BELFAST BT 10 OBY
Tel: (0232) 625-566
Telex: 747626
M

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9GT
Tel: (031) 3311188
Telex: 72682
A,CH,CM,CS,E,M

UNITED STATES

Alabama

Hewlett-Packard Co.
P.O. Box 7000
8290 Whitesburg Drive, S.E.
HUNTSVILLE, AL 35802
Tel: (205) 830-2000
CH,CM,CS,E,M*

Arizona

Hewlett-Packard Co.
8080 Point Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 889-4631
CH,E,MS**

California

Hewlett-Packard Co.
99 South Hill Dr.
4BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS
Hewlett-Packard Co.
7621 Canoga Avenue
CANOGA PARK, CA 91304
Tel: (213) 702-8363
A,CH,CS,E,P

Hewlett-Packard Co.
P.O. Box 7830 (93747)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
CH,CS,MS

Hewlett-Packard Co.
P.O. Box 4230
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
320 S. Kellogg, Suite B
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWNDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
Telex: 910-325-6608
CH,CM,CS,MP

Hewlett-Packard Co.
3200 Hillview Avenue
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
P.O. Box 15976 (95813)
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333 **SAN DIEGO, CA 92123**
Tel: (619) 279-3200
CH,CM,CS,E,MP

Hewlett-Packard Co.
2305 Camino Ramon "C"
SAN RAMON, CA 94583
Tel: (415) 838-5900
CH,CS

Hewlett-Packard Co.
P.O. Box 4230
Fullerton, CA 92631
363 Brookhollow Drive
SANTA ANA, CA 92705
Tel: (714) 641-0977
A,CH,CM,CS,MP
Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0586
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91362
Tel: (213) 706-6800
E*,CH*,CS*

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 771-3455
Telex: 910-935-0785
A,CH,CM,CS,E,MS

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida

Hewlett-Packard Co.
P.O. Box 24210 (33307)
2901 N.W. 62nd Street
FORT LAUDERDALE, FL 33309
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
P.O. Box 13910
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 859-2900
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
5750B N. Hoover Blvd., Suite 123
TAMPA, FL 33614
Tel: (813) 884-3282
A*,CH,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.
P.O. Box 105005
30348 **ATLANTA, GA 2000**
South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hawaii

Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,MS

Illinois

Hewlett-Packard Co.
P.O. Box 1607
304 Eldorado Road
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,MS**
Hewlett-Packard Co.
1100 31st Street, Suite 100
DOWNERS GROVE, IL 60515
Tel: (312) 960-5760
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,MP

Indiana

Hewlett-Packard Co.
P.O. Box 50807
7301 No. Shadeland Avenue
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa

Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50262
Tel: (515) 224-1435
CH,MS**
Hewlett-Packard Co.
2415 Heinz Road
IOWA CITY, IA 52240
Tel: (319) 351-1020
CH,E*,MS

Kansas

Hewlett-Packard Co.
7804 East Funston Road
Suite 203
WICHITA, KA 67207
Tel: (316) 684-8491
CH

Kentucky

Hewlett-Packard Co.
10300 Linn Station Road
Suite 100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana

Hewlett-Packard Co.
P.O. Box 1449
KENNER, LA 70063
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, Md. 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,CH,CM,CS,E,MP

Massachusetts

Hewlett-Packard Co.
32 Hartwell Avenue
LINGTON, MA 02173
Tel: (617) 861-8960
A,CH,CM,CS,E,MP

Michigan

Hewlett-Packard Co.
23855 Research Drive
FARMINGTON HILLS, MI 48024
Tel: (313) 476-6400
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48064
Tel: (313) 643-6474
CH,CS

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Missouri

Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,CH,CS,E,MP

Nebraska

Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
CM,MS

New Jersey

Hewlett-Packard Co.
W120 Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
60 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico

Hewlett-Packard Co.
P.O. Box 11634 (87192)
11300 Lomas Blvd., N.E.
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH,CS,E,MS

New York

Hewlett-Packard Co.
Computer Drive
ALBANY, NY 12205
Tel: (518) 458-1550
Telex: 710-444-4691
A,CH,E,MS

Hewlett-Packard Co.
P.O. Box AC
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621
CH

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
CH,CM,CS,E,MS

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
MANHATTAN NY 10001
Tel: (212) 971-0800
CH,CS,E*,M*

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 328-0884
CM,CH,CS,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
Telex: 510-221-2183
A,CH,CM,CS,E,MS



SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

North Carolina

Hewlett-Packard Co.
P.O. Box 26500 (27420)
5605 Roanne Way
GREENSBORO, NC 27409
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
CH,CM,CS,E*

Hewlett-Packard Co.
P.O. Box 280
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS

Oklahoma

Hewlett-Packard Co.
P.O. Box 75609 (73147)
304 N. Meridian, Suite A
3
OKLAHOMA CITY, OK 73107
Tel: (405) 946-9499
A*,CH,E*,MS

Hewlett-Packard Co.
3840 S. 103rd E. Avenue
Logan Building, Suite 100
TULSA, OK 74145
Tel: (918) 665-3300
A** ,CH,CS,M*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
1021 8th Avenue
KING OF PRUSSIA, PA 19046
Tel: (215) 265-7000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP

South Carolina

Hewlett-Packard Co.
P.O. Box 21708 (29221)
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29210
Tel: (803) 732-0400
CH,E,MS

Tennessee

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Texas

Hewlett-Packard Co.
Suite C-110
4171 North Mesa
EL PASO, TX 79902
Tel: (915) 533-3555
CH,E*,MS**

Hewlett-Packard Co.
P.O. Box 42816 (77042)
10535 Harwin Street
HOUSTON, TX 77036
Tel: (713) 776-6400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
P.O. Box 1270
930 E. Campbell Rd.
RICHARDSON, TX 75080
Tel: (214) 231-6101
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
P.O. Box 32993 (78216)
1020 Central Parkway South
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
P.O. Box 26626 (84126)
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
P.O. Box 9669 (23228)
RICHMOND, Va. 23228
4305 Cox Road
GLEN ALLEN, Va. 23060
Tel: (804) 747-7750
A,CH,CS,E,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99206
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
P.O. Box 4297
4604 MacCorkle Ave., S.E.
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CM,E,M

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3A Transversal Los Ruices Norte
Edificio Segre
Apartado 50933
CARACAS 1071
Tel: 239-4133
Telex: 25146 HEWPACK
A,CH,CS,E,MS,P

Hewlett-Packard de Venezuela C.A.
Calle-72-Entre 3H Y 3Y, No.3H-40
Edificio Ada-Evelyn, Local B
Apartado 2646
MARACAIBO, Estado Zulia
Tel: (061) 80.304
C,E*

Hewlett-Packard de Venezuela C.A.
Calle Vargas Rondon
Edificio Seguros Carabobo, Piso 10
VALENCIA
Tel: (041) 51 385
CH,CS,P

Colimodio S.A.
Este 2 - Sur 21 No. 148
Apartado 1053
CARACAS 1010
Tel: 571-3511
Telex: 21529 COLMODIO
M

ZIMBABWE

Field Technical Sales
45 Kelvin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,M,P

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7 Rue du Bois-du-Lan
CH-1217 MEYRIN 1, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Rd.
G.P.O. Box 795
HONG KONG
Tel: 5-832 3211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.H.
Lieblgasse 1
P.O.Box 72
A-1222 VIENNA, Austria
Tel: (222) 2365110
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
NL-1183 AG AMSTELVEEN
The Netherlands
P.O.Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 20 437771

OTHER EUROPE

Hewlett-Packard S.A.
7 rue du Bois-du-Lan
CH-1217 MEYRIN 1, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Ave.
Maroussi, ATHENS, Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
4 Choce Cherry Road
Rockville, MD 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
P.O. Box 105005
450 Interstate N. Parkway
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankershim Blvd.
LOS ANGELES, CA 91604
Tel: (213) 877-1282

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

March 1983 5952-6900

HP distributors are printed in italics.

