



## ERROR INDICATORS

The printer errors will be indicated on the operators console. When a print check or forms check is sensed by the attachment it will turn on the printer check or forms check LED. In addition to the LED on the operators console coming on the specific check will be indicated by the diagnostic LED's on the Receiver Card.

Thirteen different error conditions can be indicated by the diagnostic indicators.

- 0. 0 0 0 0 POWER OFF OR NO ERROR
- 1. 0 0 0 0 ATTACHMENT STORAGE CHECK
- 2. 0 0 0 0 OVERTEMPERATURE
- 3. 0 0 0 0 SWITCH IN DISABLE POSITION
- 4. 0 0 0 0 THROAT OPEN
- 5. 0 0 0 0 COVER OPEN
- 7. 0 0 0 0 FORMS JAMMED
- 8. 0 0 0 0 HAMMER CHECK
- 9. 0 0 0 0 EXTERNAL INTERFACE CABLE CHECK
- 10. 0 0 0 0 PRINTER INTERFACE CHECK
- 12. 0 0 0 0 END OF FORMS
- 13. 0 0 0 0 BELT SYNC CHECK
- 14. 0 0 0 0 BELT SPEED CHECK

*Note:* For user information, see the Prolog.

Sequence		Part	EC 374831				
1268AA	1 of 2	6826708	7-1-78				

Sequence		Part	EC 374831				
1268AA	2 of 2	6826708	7-1-78				

COPYRIGHT IBM CORPORATION 1976