

TTY ATTACHMENT ENTRY MAP

MAP 4000-1

FEAT.# 7845

PAGE 1 OF 1

ENTRY POINTS

FROM	ENTER THIS MAP		
MAP NUMBER	ENTRY POINT	PAGE NUMBER	STEP NUMBER

0020	A	1	001
3881	A	1	001

EXIT POINTS

EXIT THIS MAP		TO	
PAGE NUMBER	STEP NUMBER	MAP NUMBER	ENTRY POINT

1	002	4071	A

001
(ENTRY POINT A)

THIS IS AN MDI 'AUTO MODE' MAP (REFERENCE DIAGNOSTIC SERVICE GUIDE 05.00.00). TO USE IT IN MANUAL MODE: LOAD AND EXECUTE THE MAP PROGRAM (BXXXX WHERE XXXX=MAP#). NO CE RESPONSE IS NEEDED. IF A FAILURE IS FOUND THE PROGRAM IDENTIFIES THE FAILING FIELD REPLACEABLE UNIT(S) OR LOADS ONE OR MORE 'MANUAL MODE' MAPS AND EXECUTES UNTIL A FIELD REPLACEABLE UNIT(S) CAN BE IDENTIFIED, OR UNTIL CE ACTION IS NEEDED. (REFERENCE DIAGNOSTIC SERVICE GUIDE 05.01.00).

RUN TTY ATTACHMENT TEST - T4000

DID TTY ATTACHMENT TEST RUN OK (NO INTERNAL ROUTINE OR CHECKPOINT STOP) ?

MDI=\$TUXX,T4000,02,0000,EQ

Y N

002
TTY ATTACHMENT TEST DID NOT RUN CORRECTLY.
GO TO MAP 4071, ENTRY POINT A.
MDI=\$FIXT

003
GOOD END THIS MAP

MDI=\$STOP

F/C 7845 TTY ATTACHMENT AUTOMATIC TEST COMPLETE.
IF THE CARD IS STILL SUSPECT OR FOR ADDITIONAL TESTING, RUN MAP 4001